



Alpha Plus

User Guide

Contents

1	Introduction	7
1.1	Features	7
1.2	Accessories	8
1.3	The Remote Control	9
1.4	Getting Started	11
1.5	The Apps Screen	12
	Customizing the Apps Screen	13
2	Installation	14
2.1	Safety Precautions	15
2.2	Satellite Dish Connection	15
2.3	Aerial Connection	16
2.4	TV Connections	16
	HDMI connection	17
	Component Video Connection	17
	SCART Connection	18
	Composite Video Connection	18
2.5	AV Receiver Connection	19
2.6	Network Connection	19
3	Scanning for Channels	21
3.1	Satellite Dish Settings	21
	LNB Settings	21
	Unicable Settings	22
3.2	Using a Motorized Dish	23
	Using DiSEqC 1.2	23
	Using USALS	24
3.3	Scanning for Satellite TV Channels	25
	Scanning for Every Channel	26

	Scanning a Specific Transponder	26
	Scanning for One Channel	27
3.4	Scanning for Terrestrial TV Channels	27
3.5	Scanning for Cable TV Channels	28
4	Watching TV	29
4.1	Channel List	30
	Channel List Preferences	30
4.2	TV Programme Guide	31
	Programme Guide Preferences	32
4.3	Controlling Audio	33
4.4	Displaying Subtitles	33
4.5	Watching Two Channels Simultaneously	33
4.6	Viewing Teletext	34
4.7	Watching Pay Channels	34
4.8	Watching Subchannels	35
4.9	Setting Up Timers	35
	Wake-Up Timer	35
	Sleep Timer	35
	Saving Energy	36
4.10	Managing Channels	36
4.11	HbbTV	38
5	Recording TV	39
5.1	Recording TV Programmes	39
	Scheduling TV Recordings Using the Programme Guide	39
	Manually Scheduling TV Recordings	40
5.2	Time-Shifting	40
5.3	Playing Recordings	41
5.4	Recording Preferences	41
6	Playing Media Files	43
6.1	Managing Storage Devices	43
6.2	Managing Files	44
6.3	Playing Recordings and Videos	45

6.4	Viewing Photos	46
	Slideshow Preferences	46
6.5	Playing Music	46
6.6	Playing Media files from Other Devices	47
	Accessing Other Devices	47
	Allowing Other Devices to Access the Receiver	48
7	Apps	49
7.1	Webzeal	49
	Viewing a Webpage	49
	Navigating Webpages	50
	Bookmarks	50
	Entering Text	51
7.2	YouTube	51
	Playing Videos	51
7.3	Free TV+	52
7.4	iTV+	52
7.5	iRadio+	53
7.6	TV Portal+	53
7.7	Torrent Player	54
7.8	Weather	54
7.9	T Apps	55
	T Apps Server Settings	55
8	Preference Settings	56
8.1	Language Settings	56
	Using Different Fonts	56
8.2	Network Settings	57
	Proxy Server Settings	57
	DDNS Settings	57
8.3	Clock Settings	58
8.4	Audio and Video Settings	58
8.5	On-Screen Display Settings	59
8.6	Parental Control	60
8.7	Maintaining the Digital TV Receiver	60

Sharing Channel Data	61
8.8 Updating the Digital TV Receiver	61
A Universal Remote Control	63
B Legal Notices	87
B.1 Copyright	87
B.2 Warranty	87
B.3 Trademarks	87
B.4 Correct Disposal of This Product	88

1 Introduction

1.1 Features

Beyond simply receiving satellite signals, this digital TV receiver has many convenient and advanced features:

- Users can watch cable and terrestrial channels as well as satellite stations.
- This receiver has four slots for CA modules and pay-TV cards. See *Watching Pay Channels* on page 34.
- Users can use the built-in hard drive or removable storage devices to record TV programmes. It is possible to schedule this receiver to record not only a single TV programme but also every episode of a series using the programme guide. See *Recording TV* on page 39.
- Users can pause and resume a live programme. See *Time-Shifting* on page 40.
- Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. It is also possible to watch a live channel while playing a recorded programme. See *Watching Two Channels Simultaneously* on page 33.
- This receiver can play many kinds of media files, including photos, music, and videos. See *Playing Media Files* on page 43.
- This receiver can play media files from other devices, such as computers and network-attached storages. See *Playing Media files from Other Devices* on page 47.
- This receiver provides a variety of apps, including YouTube. See *The Apps Screen* on page 12.

1.2 Accessories

The following accessories are included with the digital TV receiver.




Remote control




Batteries



Power cord

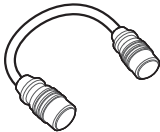

Loop-through cable

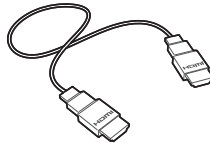

HDMI cable







Wi-Fi dongle

Use the Wi-Fi dongle to connect the receiver to a wireless network. See Network Connection on page 19.

1.3 The Remote Control

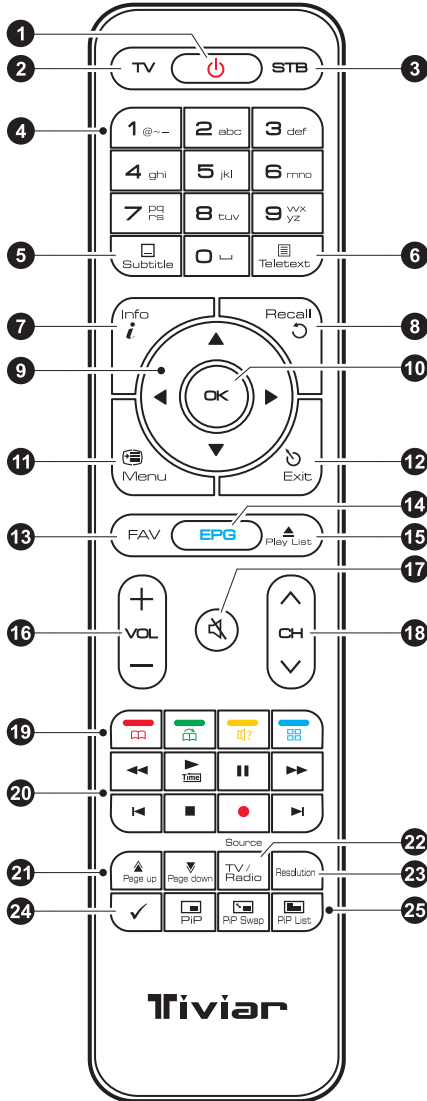
Use the remote control to control the digital TV receiver. Before using, make sure that batteries are installed correctly.



- 1 : Turn the digital TV receiver on or off.
- 2 **TV**: Switch the remote control to TV control mode.
- 3 **STB**: Switch the remote control to receiver control mode.
- 4 Use the numeric buttons to enter numbers.
- 5 **Subtitle**: Display subtitles. See *Displaying Subtitles* on page 33.
- 6 **Teletext**: Display teletext pages. See *Viewing Teletext* on page 34.
- 7 **Info**: Display information about the current programme.
- 8 **Recall**: Display the list of recently-viewed channels.
- 9 Use these navigation buttons to navigate the menus and interactive screens.
- 10 **OK**: Select an item. In addition, use this button to display the channel list. See *Channel List* on page 30.
- 11 **Menu**: Display apps. See *The Apps Screen* on page 12. In addition, use this button to return to the higher menu level.
- 12 **Exit**: Return to the previous screen or close the current list or dialog box.
- 13 **FAV**: Display the list of favourite channels.
- 14 **EPG**: Display the programme guide. See *TV Programme Guide* on page 31.
- 15 **Play List**: Display the list of files stored in the built-in hard drive or in a removable storage device. See *Playing Media Files* on page 43.
- 16 Use these volume buttons to adjust the volume.
- 17 : Mute the sound.
- 18 Use these channel buttons to change channels.
- 19 These colour buttons perform different functions, depending on what the receiver is currently doing.
- 20 Use these buttons to control recording and playback. See *Recording TV* on page 39 and *Playing Media Files* on page 43.
- 21 Use these buttons to scroll lists.
- 22 **TV/Radio**: Switch between TV channels and radio stations.
- 23 **Resolution**: Change the picture resolution.
- 24 : This button performs different functions, depending on what the receiver is currently doing.
- 25 Use these buttons to watch two different channels at the same time. See

1.4 Getting Started

Install the digital TV receiver properly, referring to Installation on page 14.

Plug the power adapter into a power outlet, and insert the connector into the power socket on the rear of the receiver. Then press the power button  on the remote control to turn on the receiver.

When turning on the receiver for the first time, the initial setup process automatically starts. Follow the on-screen instructions to finish the process. At each step, either make a choice or skip the step.

1. Choose a language for the user interface.
2. Configure the network settings. See Network Connection on page 19 and Network Settings on page 57.
3. Install add-ons to internet-based apps, such as Free TV+ and iRadio+, when an internet connection is available. Additionally, determine whether to restore the receiver using the stored settings and channels, if there is any backup data.
4. Set the clock. See Clock Settings on page 58.
5. Scan for TV channels. See Scanning for Channels on page 21.

1.5 The Apps Screen



Pressing the Menu button displays app icons at the bottom of the screen. To view more apps, press the up navigation button.

To access the customary menus, select **Settings**. Some apps allow users to quickly access frequently-used setting menus and functions.

- **Back-Up:** See Maintaining the Digital TV Receiver on page 60.
- **CH Edit:** See Managing Channels on page 36.
- **Download:** See Updating the Digital TV Receiver on page 61.
- **TV Schedule:** See TV Programme Guide on page 31.
- **T Air:** See Accessing Other Devices on page 47.
- **T Server:** See Allowing Other Devices to Access the Receiver on page 48.
- **Movie:** See Playing Media Files on page 43.
- **Music:** See Playing Media Files on page 43.
- **Network:** See Network Settings on page 57.
- **Photos:** See Playing Media Files on page 43.
- **Recordings:** See Playing Media Files on page 43.
- **Reservation:** See Manually Scheduling TV Recordings on page 40.
- **Storage:** See Managing Storage Devices on page 43.

- **YouTube:** See YouTube on page 51.

For other apps, see Apps on page 49.

Note

While some apps, such as Calendar, are easy to use, other internet-based apps may be unavailable or restricted, depending on the country, so this guide does not cover every app provided by this receiver.

Customizing the Apps Screen

Users can rearrange app icons. Place the focus on an icon and press the red button. Move the icon to a new location using the navigation buttons, and then press the OK button to fix it in place.

Put frequently-used apps in the bottom line for faster access.


2 Installation

Install the digital TV receiver, limited by the specifications shown in the table below.

Maximum power consumption	55 W when in operation 1 W when in standby mode
Size	340 mm × 60 mm × 245 mm
Weight	2 kg (without hard drive)
Operating temperature	0–45°C, 32–113°F
Storage temperature	–10–70°C, 14–158°F

On the rear, this digital TV receiver has several connectors:

- Satellite dish connectors
- Aerial connectors
- AV connectors for a TV and an AV receiver
- USB ports for removable storage devices
- An Ethernet port for internet connection
- An eSATA port for a removable hard drive

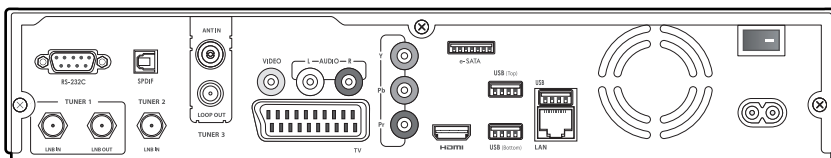

The RS-232C port may be used only by an engineer for installation or service.

2.1 Safety Precautions

To avoid hazards and to keep the performance of the digital TV receiver at its best, obey the following instructions:


- Do not block ventilation openings on the receiver.
- When installing the receiver in a cabinet, make sure to leave a space of at least 10 centimetres around the receiver for cooling.
- Do not place the receiver in direct sunlight and close to heat-emitting devices that can interfere with cooling.
- Do not expose the receiver to water and moisture to prevent fire and electric shock.
- Use only accessories provided or specified by the manufacturer.
- Use dry cloth to clean the receiver.



Never open the receiver casing under any circumstances, or the warranty will be void.

Repair tasks must be done only by qualified persons with expertise.


2.2 Satellite Dish Connection

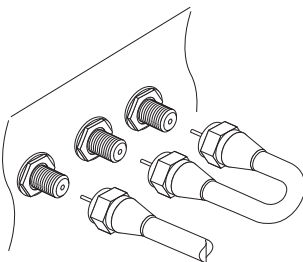

Connect the cable from the satellite dish to LNB IN of TUNER 1. In most situations, connect LNB OUT of TUNER 1 to LNB IN of TUNER 2 using the loop-through cable. Only when two satellite dishes are available without any multi-

dish switch, users should connect the cable from the other dish to LNB IN of TUNER 2.

2.3 Aerial Connection

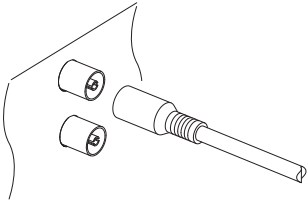

Connect the cable from the aerial or cable TV outlet to ANT IN.


2.4 TV Connections

This digital TV receiver has a wide range of connectors available for use by a TV. The list below shows video connectors in the order of picture quality.

- HDMI
- Component video
- SCART
- Composite video

Use the HDMI connector to connect the receiver to a TV for the best available picture quality. If the TV has no available HDMI connector, try the next best connection type.

HDMI connection

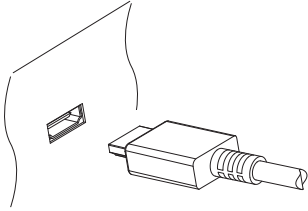


Connect the receiver's HDMI output connectors to the TV's HDMI input connector using an HDMI cable.

Note


Some HDMI cables and TVs may not be compatible with the receiver due to differing HDMI specifications.

Component Video Connection

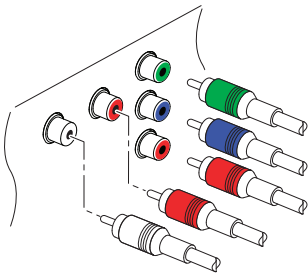

The receiver's component video connectors are labelled Y, Pb, and Pr, and their companion audio connectors are labelled L and R. Each of them is coloured differently. A typical component cable has five connectors. Connect the receiver's component video and audio output connectors to the TV's component video and audio input connectors using a component cable, so that the connectors of the same colour connect to each other.

SCART Connection

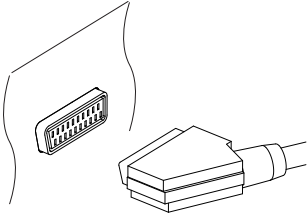


Connect the receiver's SCART output connector to the TV's SCART input connector using a SCART cable. An extra audio connection is not needed because SCART also carries audio.

Note

SCART connectors cannot carry HD video.

Composite Video Connection

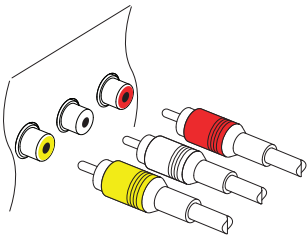


The composite video connector shares the audio connectors with the component video connectors. A typical composite cable has three connectors. The yellow connector is for the video connection. Connect the receiver's composite video and audio output connectors to the TV's composite video and audio input connectors using a composite cable, so that the connectors of the same colour connect to each other.

Note

Composite video connectors cannot carry HD video.


2.5 AV Receiver Connection

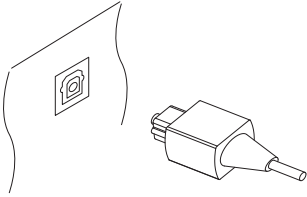


Use an AV receiver for better audio quality. Connect the receiver's SPDIF connector to the AV receiver's digital audio input connector using an optical audio cable.

2.6 Network Connection

Connect the receiver to the wired or wireless network. If a network cable is available, connect the receiver's LAN port to the router using a network cable.

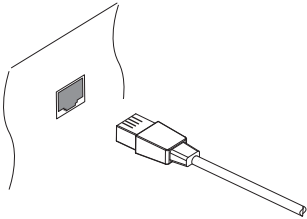

If no network cable is available, use the Wi-Fi dongle for wireless network connections. When the receiver is off, plug the Wi-Fi dongle into one of the USB ports on the rear of the receiver.

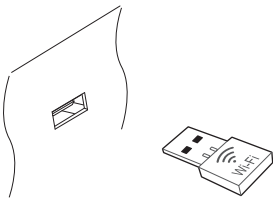

For details on how to configure the network settings, see Network Settings on page 57.

3 Scanning for Channels

A broadcast satellite's channels are called transponders. A transponder gathers signals over a range of uplink frequencies and retransmits them on a different set of downlink frequencies to receivers on Earth. Multiple TV channels are broadcast through a transponder. A transponder has three main components: frequency, symbol rate, and polarization.

3.1 Satellite Dish Settings

LNB Settings

A group of satellite dish settings must be properly configured for each desired satellite before performing a channel scan.

Open the **Settings > Installation > Dish Setting** menu. There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up. To view an enlarged signal bar display, press the blue button.

Configure the following settings properly using the signal bars.

- **Satellite:** Choose a target satellite from the list of satellites.
- **Tuner Connection:** Specify whether the receiver's satellite dish connectors are connected to two different dishes separately or to the one same dish via the loop-through cable. This option is available only when both connectors are connected by any means.
- **Tuner:** Determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop Through**.
- **Frequency:** Choose a target transponder from the list of transponders.
- **LNB Power:** An LNB must be supplied with power to operate. Turn this on to supply the LNB with power if it doesn't have its own power supply.

- **LNB Type:** Specify what type of LNB is used.
- **LNB Frequency:** Specify what frequency the LNB generates. A dual-band LNB, also called universal LNB, generates two alternative frequencies to receive a wider band of satellite frequencies.
- **LNB 22 kHz:** Either turn this on or off to pick up a higher or lower frequency band.
- **DiSEqC Switch:** If one or more typical DiSEqC switches are used, this option must be set properly. Specify which of the DiSEqC ports is connected to the intended dish.
- **Positioner Setting:** See Using a Motorized Dish on page 23.

On this screen, users can change satellite and transponder data.

Rename a satellite: Choose **Satellite** and select a satellite. Press the red button and then enter a new name using the on-screen keyboard.

Edit a satellite's longitude: Choose **Satellite** and select a satellite. Press the green button and then modify the longitude.

Clear all transponders of a satellite: Choose **Satellite** and select a satellite. Press the yellow button and then confirm to clear them.

Add a transponder: Place the focus on **Frequency** and press the green button. Specify the frequency, symbol rate, and polarization.

Edit a transponder: Choose **Frequency** and select a transponder. Press the yellow button and then modify the transponder's details.

Delete a transponder: Choose **Frequency** and select a transponder. Press the red button and then confirm to delete it.

Unicable Settings


If the user's house is equipped with a single cable router, configure unicable settings properly.

Open the **Settings > Installation > Dish Setting** menu. Set **LNB Type** to **Unicable** and then choose **Unicable Setting**. Choose **Config Mode** and determine whether to scan for all available channels or a specific channel. Specify the details, such as port and predetermined intermediate frequency.

3.2 Using a Motorized Dish

While a fixed dish usually only picks up one satellite, a motorized dish can pick up multiple satellites.

There are two control methods for motorized dishes: DiSEqC 1.2 and USALS. With DiSEqC 1.2, the user must manually operate the dish to locate satellites one by one. The digital TV receiver stores each satellite position for later use. With USALS, the receiver can pinpoint all visible satellites through calculations using the dish coordinates and the built-in database of satellite positions.

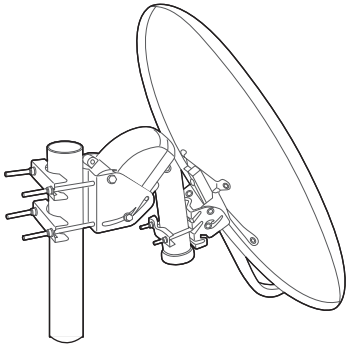

Using DiSEqC 1.2

Open the **Settings > Installation > Dish Setting** menu and choose **Positioner Setting**. Set **Positioner** to **DiSEqC 1.2** and then repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point at the highest point in its arc. The dish's movement accuracy may decrease over long-term use. To correct movement errors, choose **(Re-) Calculate** from **Positioner Command**.
2. Choose **Satellite** and choose a target satellite.
3. Choose **Tuner** and determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop-Through** under **Settings > Installation > Dish Setting**.

4. Choose **Frequency** and select any available transponder.
5. Choose **Go to Stored Position** from **Positioner Command** to rotate the dish, so that it faces the target satellite.
6. Place the focus on **Move** and press the left or right navigation button to finely drive the dish east or west for the best signal. The dish rotates continuously as long as either of these buttons is held down.
7. Choose **Store Satellite Position** from **Positioner Command** to save the dish's current position for the target satellite.

It may be useful to set limits to the movement scope of the dish for easier manipulation. Repeat these steps two times to set a limit position for the east and the west.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Place the focus on **Move** and press the left or right navigation button to drive the dish.
3. Choose **Set East (soft) Limit** or **Set West (soft) Limit** from **Positioner Command** to save the dish's current position to use it as a limit position.

Choosing **Disable (soft) Limits** from **Positioner Command** clears these limit positions.

Using USALS

Open the **Settings > Installation > Dish Setting** menu and choose **Positioner Setting**. Set **Positioner** to **USALS** and then specify these items correctly:

- **Dish Longitude:** Enter the longitude where the dish is located.
- **Dish Latitude:** Enter the latitude where the dish is located.

Give the dish a test run to see if it works properly. Repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Choose **Satellite** and choose a target satellite.

3. Choose **Frequency** and select any available transponder.
4. Choose **Go to** to rotate the dish so that it faces the target satellite.

3.3 Scanning for Satellite TV Channels

Open the **Settings > Installation > Satellite Search** menu.

Three methods are available to scan for satellite TV channels.

- Scanning all available transponders for every channel
- Scanning for multiple channels that a specific transponder carries.
- Scanning for a specific one of multiple channels that a specific transponder carries.

Some option items are used in common in more than one scanning method, as follows:

- **Satellite:** Choose a target satellite from the list of satellites.
- **Search Type:** Determine which types of channels to scan for.
 - **All Service:** Scan for all available radio and TV channels.
 - **FTA Only:** Scan only for free radio and TV channels.
 - **TV Only:** Scan only for free and pay TV channels.
- **Network Search:** A transponder usually has information about other transponders provided by the same satellite TV service provider. It is better to turn on this option so that the receiver uses broadcast network information for faster and more precise scanning.

When any dish settings need to be reconfigured, select **Dish Setting** or **Positioner Setting** to jump to the relevant menu. To return to this menu, select **Service Search**.

Particular LNBS have an indicator light to show if the signal strength is good enough for the receiver to perform a channel scan. This may be useful when installing a new satellite dish. To activate this function, press the green button and then confirm to use it.

Scanning for Every Channel

Several methods are available for scanning for every channel.

- Set **Search Mode** to **Auto**. With this method, the receiver uses its numerous database of transponders when scanning for channels.
- Set **Search Mode** to **Blind**. Transponders occasionally change, so the receiver may happen to miss some channels when scanning for channels using the transponder database. With this method, the receiver scans all potential transponders using every possible combination of transponder elements not to miss any channel in a scan. However, it takes much longer time.
- Set **Search Mode** to **Fast Scan**. Particular satellite TV service providers manage dedicated transponders to provide up-to-date transponder information. With this method, the receiver uses that sort of transponder for faster and more precise scanning. Choose **Select Operator** and select a satellite TV service provider.
- Set **Search Mode** to **Canal Digital Nordic**. With this method, the receiver scans only for Canal Digital channels.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

Scanning a Specific Transponder

Generally, one transponder carries multiple TV channels. To scan a specific transponder for the channels it carries, set **Search Mode** to **Manual**. Users need to get several details about a target transponder.

- **Frequency**: Choose a target transponder from the list of transponders.
- **Symbol rate**: Specify the transponder's symbol rate.
- **Polarity**: Specify the transponder's polarization.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

Scanning for One Channel

To scan for only one specific channel, set **Search Mode** to **Advanced**. Each satellite TV channel has unique packet IDs used to distinguish between channels. In addition to the information about a target transponder, users need to know what packet IDs a target channel uses.

- **Video PID:** Specify the channel's video packet ID.
- **Audio PID:** Specify the channel's audio packet ID.
- **PCR PID:** Specify the channel's PCR (programme clock reference) packet ID. This is usually identical to video PID. If the video PID setting doesn't work, try 8191.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

3.4 Scanning for Terrestrial TV Channels

Open the **Settings > Installation > Terrestrial Search** menu.

There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up.

To scan for all available channels, set **Search Mode** to **Auto**. Choose **Search Type** and determine which type of channels to scan for.

- **All Service:** Scan for all available TV and radio channels.
- **FTA Only:** Scan only for free TV and radio channels.
- **TV Only:** Scan only for free and pay TV channels.

To scan for a specific channel, set it to **Manual**, and then choose **Channel** and specify the channel's number.

If the aerial needs power supply, turn on **Antenna 5V**.

Select **Start Search** to start channel scan.

3.5 Scanning for Cable TV Channels

Open the **Settings > Installation > Cable Search** menu.

There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up.

To scan for all available channels, set **Search Mode** to **Auto**. Choose **Search Type** and determine which type of channels to scan for.

- **All Service:** Scan for all available TV and radio channels.
- **FTA Only:** Scan only for free TV and radio channels.
- **TV Only:** Scan only for free and pay TV channels.

To scan for a specific channel, set **Search Mode** to **Manual**. Set these options for the channel.










- **Frequency:** Specify the channel's frequency.
- **Symbol rate:** Specify the channels' symbol rate.
- **QAM Mode:** Specify the modulation method used for the channel.

Select **Start Search** to start channel scan.

4 Watching TV

Use the channel buttons or the numeric buttons to change channels. When changing channels, a dialog box appears showing information about the current programme on the current channel, such as programme title and running time. Pressing the INFO button also displays the programme information dialog box.

The following symbols may appear on the dialog box to indicate what the current channel and programme features.

- : This is a pay channel. See *Watching Pay Channels* on page 34.
- : Teletext pages are available. See *Viewing Teletext* on page 34.
- : Subtitles are available. See *Displaying Subtitles* on page 33.
- : Dolby audio is available. See *Audio and Video Settings* on page 58.
- **HD**: This is an HD channel. See *Audio and Video Settings* on page 58.
- : Subchannels are available. See *Watching Subchannels* on page 35.
- : The receiver is currently connected to the network.
- : The first tuner is currently being used.
- : The second tuner is currently being used.
- : The third tuner is currently being used.

Use the up and down navigation buttons to view information about the previous and following programmes, and use the left and right navigation buttons to view information about programmes on other channels. To view more information about the current programme, press the INFO button again. When a channel number other than the current channel is displayed, pressing the OK button switches to the channel.

Pressing the FAV button displays the list of channel groups, including favourites groups. After a group is chosen, users can change only between the channels that belong to the group.

4.1 Channel List

Use the channel list to change channels more easily. Press the OK button to open the channel list.

Switch to a specific channel: Place the focus on a channel entry using the navigation or numeric buttons, and then press the OK button.

Skip through a channel list: Use the up and down navigation buttons or, alternatively, the Page up and Page down buttons.

Display specific channels: Press the red button to sort or filter the channel list. A list of channel categories is displayed in the middle of the screen. Repeatedly pressing the red button displays different channel categories. Choose a channel category and then a subcategory.

Add a channel to favourites groups: Place the focus on a channel entry and press the green button. A list appears showing multiple favourites groups. Select one or more groups, and then press the EXIT button to finish.

View a favourites group's channels: Press the FAV button and choose a favourites group.

Search for channels: Press the yellow button and enter search criteria using the on-screen keyboard.


Channel List Preferences

Press the blue button and set these options properly.

- **Service preview:** With this enabled, selecting a channel entry displays the channel's picture in the inset window on the upper right of the screen. Select it once more to switch to the channel. With this option disabled, selecting a channel entry immediately switches to the channel.
- **Keep viewing service when exit:** With this disabled, pressing the EXIT button switches to the channel that was focused on. With this option enabled, pressing the EXIT button closes the channel list without changing channels.
- **View only filtered list:** With this enabled, choosing a channel category filters out channels that are not in the chosen category.

- **Logical channel number:** Some channels have their own channel numbers, and others don't. With this option enabled, the receiver uses the proper numbers. Channels that don't have proper numbers are numbered from 1000. With this option disabled, channels are numbered in the order in which they are found.
- **HD service grouping:** With this option enabled, HD channels are grouped at the top of the channel list.
- **Copy Service:** Channels are associated with the dish connector that was used when scanning for them. If the first dish connector is linked with the second one, it's usually best to associate all channels with both dish connectors. Use this function to duplicate the channels associated with the first dish connector so that the second one is also associated with them, or vice versa.

4.2 TV Programme Guide

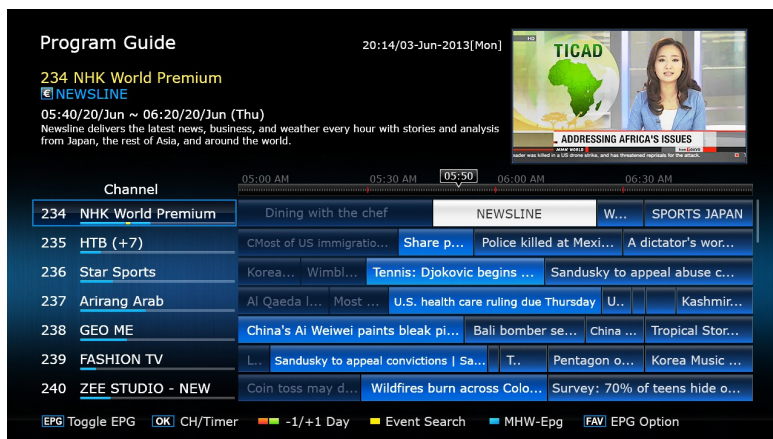

The TV programme guide (EPG) provides schedule information for current and upcoming TV programmes. Before using the programme guide, make sure that the clock is set correctly under **Settings > Configuration > Time Setting**.

Press the EPG button to open the programme guide. Use the navigation buttons to browse the channel timeline.

Skip backward or forward by a day: Press the red button or the green button.

Change the timeline view: Pressing the EPG button alternates the timeline view between channel-based view and time-based view.

Change the time unit: Press the FAV button and set EPG Time scale shorter or longer.

View a programme's information: Press the INFO button on a programme entry.

Schedule a programme to watch: Select a programme entry and choose Play.

Schedule a programme to record: Select a programme entry and choose either Once Record or Series Record. For details, see Scheduling TV Recordings Using the Programme Guide on page 39.

Cancel a scheduled event: Select a programme entry that is scheduled to watch or record.

Search for programmes: Press the yellow button. Choose Search event name and enter search criteria. It is also possible to search by programme genre. Choose Content Code and choose a genre.

Programme Guide Preferences

While most TV stations provide programme information for only a couple of days in each transponder, some TV stations, such as Canal+ and Sky, use a dedicated transponder to provide programme information for 7 or more days. Press the blue button and determine which type of programme guide to use.

It takes a rather longer time for the receiver to get programme information from the MediaHighway programme guide due to the large amount of information. Users can set the receiver to access the MediaHighway programme guide when the receiver turns on, to save time. Press the FAV button and set Start MHW-Epg Automatically to On.

Note


The MediaHighway programme guide may be not available, depending on the country.

4.3 Controlling Audio

When watching a channel, press the yellow button to control audio using these options:

- **Audio Track:** A TV programme may provide audio in two or more languages. Choose a different audio language if available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use.
- **Sound Level:** The volume may vary depending on channel. Use this to make the volume even at every channel. With this set to **High**, for example, the volume is automatically adjusted to the level that is higher 30% than the current channel's.

4.4 Displaying Subtitles

When the subtitle symbol  is highlighted on the programme information dialog box, it indicates that subtitles are available in one or more languages for the current programme. Press the **Subtitle** button and choose a subtitle language to display subtitles.

4.5 Watching Two Channels Simultaneously

Users can simultaneously watch two different channels with one channel shown in an inset window. It is also possible to watch a channel while playing a recording.


Press the **PiP** button, and a window appears at a corner of the screen, displaying another channel. Pressing the **PiP** button again displays the two pictures side by side at the same size. To close the window, press the **PiP** button again.

Change channels for the foreground picture: Press the **PiP S. List** button and select a channel from the channel list that appears.

Swap the background picture with the foreground picture: Press the PiP Swap button.

Change the location of the foreground picture: Press the Page up or Page down button.

4.6 Viewing Teletext


The teletext symbol  highlighted on the programme information dialog box indicates that teletext pages are available with the current channel. Press the Teletext button to display the teletext page.

Each teletext page has a page number. Enter a page number to view a different teletext page.

4.7 Watching Pay Channels

Pay channels are encrypted to prevent non-subscribers from watching them. Make sure to buy the correct pay-TV card, and CA module if necessary, to watch pay channels that are available.

This receiver has four slots on the right side of the front. Open the flap by pulling the right edge. The upper two slots accommodate Conax pay-TV cards, and the lower slots accommodate CA modules.

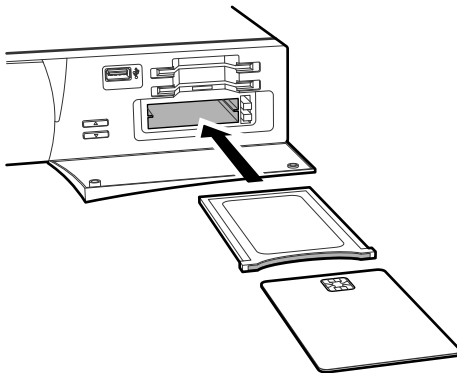


To watch Conax-scrambled pay channels, insert a Conax pay-TV card into the card slot. To watch non-Conax channels, insert a pay-TV card into a CA module, and then insert the CA module into the CAM slot.

To view the information about the pay-TV card, open the **Settings > Utilities > CAS** menu. Select the slot in which the pay-TV card or CA module is installed.

4.8 Watching Subchannels

Particular channels, such as sports channels or film channels, may have subchannels (multi-feed). For example, a film channel may use subchannels to air a single film with regular minutes-long intervals at the same time.

The subchannel symbol  highlighted on the programme information dialog box indicates that the current channel has multiple subchannels. Press the blue button, and a list appears showing available independent programmes. Select a programme to watch it.

4.9 Setting Up Timers

Wake-Up Timer

This receiver can be set to turn on at a specific time and tune in to a specific channel. Open the **Settings > Configuration > Time Setting** menu. Determine how frequently to run the wake-up timer by setting **Wake Up Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, time, and channel.

Sleep Timer

This receiver can be set to turn off at a specific time. Open the **Settings > Configuration > Time Setting** menu. Determine how frequently to run the sleep timer by setting **Sleep Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, and time.

Saving Energy

Two standby modes are available. Open the **Settings > Configuration > A/V Output Setting** menu. Enable the **Eco Power Mode** option to reduce power consumption significantly.

With this option enabled, the receiver consumes the least amount of power only for the remote control operation while in standby mode.

With this option disabled, the receiver only shuts off the audio and video outputs when going into standby mode. Even with this option disabled, pressing the power button on the remote control twice in quick succession puts the receiver into the aforementioned standby mode.

4.10 Managing Channels

Open the apps screen and select **CH Edit**.

Sort channels: Repeatedly pressing the red button sorts channels by a different category.

Search for channels: Press the yellow button and enter search criteria using the on-screen keyboard.

Lock or unlock channels: Press the blue button and select **Lock/Unlock Services**. Select one or more channels. Whenever a channel is selected, it appears in the list of locked channels on the middle of the screen. Selecting a channel from the list of locked channels unlocks it.

Rearrange channels: Press the blue button and select **Move Services**. Select one or more channels. Place the focus on a channel entry to move the selected channels above it, and then press the green button. If the **Logical channel number** option is active, however, channels are impossible to move. For information of this option, see **Channel List Preferences** on page 30.

Delete channels from the channel list: Press the blue button and select **Delete Services**. Select one or more channels. Press the green button and then confirm to delete them.

Hide channels from the channel list: Press the blue button and select **Skip Services**. Select one or more channels. Whenever a channel is selected, it appears in the list of hidden channels on the middle of the screen. Selecting a channel from the list of hidden channels makes it visible.

Add a new channel: Press the blue button, select **Edit Services**, and then press the green button. Specify the channel details, including frequency and channel name. Select **Yes** when finished.

Modify a channel's attributes: Press the blue button and select **Edit Services**. Select a channel and modify its attributes, such as channel name, for example.

Add channels to a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Choose a favourites group, then select one or more channels. Whenever a channel is selected, it appears in the favourites group on the middle of the screen. To select a different favourites group, press the green button and select a favourites group.

Remove channels from a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Choose a favourites group, then select one or more channels from the favourites group.

Add a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Press the yellow button and enter a group name using the on-screen keyboard.

Rename a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Place the focus on a favourites group and press the green button. Enter a new name using the on-screen keyboard.

Rearrange favourites groups: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Place the focus on a favourites group, press the **FAV** button, and then move it to a new location.

Delete a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Place the focus on a favourites group, press the blue button, and then confirm to delete it.

4.11 HbbTV

HbbTV combines TV services delivered via broadcast with services delivered via broadband. HbbTV services include video on demand, interactive advertising, voting, games, social networking, programme-related services, and more.

When watching a channel, a rounding circle may appear in the upper-right corner of the screen to indicate that HbbTV services are available. Press the red button to access the channel's HbbTV services via the Internet.

Note

The receiver must be connected to the Internet to use HbbTV services.
HbbTV services may not be available, depending on the TV station.


5 Recording TV

This digital receiver can record TV programmes onto the built-in hard drive as well as a removable hard drive or flash drive. However, flash drives are not recommended for recording.

The receiver is set to use the built-in hard drive for recording by default. To use a removable hard drive, see Recording Preferences on page 41.

5.1 Recording TV Programmes

Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. When using time-shifting, at most 2 different channels can be recorded simultaneously. For details on time-shifting, see Time-Shifting on page 40.

Press the record button  to instantly begin recording the current programme.

Scheduling TV Recordings Using the Programme Guide

Use the programme guide to schedule TV recordings. Open the programme guide, and press the OK button on a programme entry scheduled to air later. Either choose **Once Record** to record the programme only once, or choose **Series Record** to record its every episode.

At the scheduled time, the receiver turns on if it is off, and begins recording the programme. Even if the receiver is set to turn off before the time that the recording is supposed to finish, the receiver does not turn off until recording is done.

Manually Scheduling TV Recordings

Manual scheduling of programmes is sometimes needed because the programme guide is not always consistent with the actual broadcasting time. There may be changes in broadcast schedules or delays due to other programming.

Open the apps screen and select **Reservation**.

Add a recording event: Press the green button. Specify the program details, including channel and start time. To display the programme at the scheduled time without recording, set **Type** to **Play**. With **Alarm Confirm Message** enabled, a message appears to notify that the event will start in 5 minutes. Select **Yes** when finished.

View recording events by date: Press the yellow button to open the calendar. Select a date to view its recording events.

Edit a recording event: Place the focus on an event entry, press the OK button.

Delete a recording event: Place the focus on an event entry, press the red button, and then confirm to delete it. To clear all events at once, press the blue button.

5.2 Time-Shifting

Time-shifting temporarily records the current programme. Using this feature, users can pause and resume a live programme and even scan through it backward or forward. For example, simply pause or skip backward in the current live programme to replay missed crucial scenes when answering a phone call, when having gone to the bathroom, or when wondering what a character in a drama just mumbled.

Before using this feature, make sure that **TimeShift Start** is set to **Auto** or **Manual** under **Settings > Configuration > Recording Option**.

For details, see **Recording Preferences** on page 41.

Pause the live programme: Press the pause button **⏸**. Press it again to resume.

Skip backward or forward: Press the play button **▶** to display the progress bar. Press the left or right navigation button. Repeatedly pressing the yellow button

changes the skip interval from 10 seconds to 10 minutes.

Jump to the beginning of the time-shift recording: Press the previous button ◀.

Return to the live programme: Press the stop button ■.

5.3 Playing Recordings

Press the playlist button ▲ to access the recordings stored on removable storage devices. For details, see *Playing Recordings and Videos* on page 45.

Note

TV recordings cannot be played by any receiver other than the receiver that made them.

5.4 Recording Preferences

Open the **Settings > Configuration > Recording Option** menu.


- **Alarm Confirm Message:** With this enabled, a message appears to notify users that a scheduled recording event will begin in 5 minutes.
- **Recording Stop Message:** With this disabled, pressing the stop button ■ stops the current recording immediately without asking for confirmation.
- **Extra Recording Time Before Start:** It may be good to begin recording a few minutes earlier than the scheduled start time to avoid missing the beginning of a programme. Specify how much earlier the receiver should begin recording.
- **Extra Recording Time After Finish:** It may be good to finish recording a few minutes later than the scheduled end time to avoid missing the end of a programme. Specify how much later the receiver should finish recording.
- **TimeShift Start:** With this set to **Auto**, the receiver begins time-shift recording whenever changing channels. With this set to **Manual**, pressing the pause

button **■** begins time-shift recording. With this set to **Off**, time-shifting is disabled.

- **TimeShift Duration:** Specify the maximum duration for time-shift recording. For example, if this is set to 30 minutes, only the last 30 minutes of the programme are temporarily preserved for playback.
- **Playback Position Jump:** When playing a recording, users can use the left and right navigation buttons to skip backward and forward. Specify the amount of time to skip at a time. With this set to **Auto**, it varies from 10 seconds to 4 minutes, depending on running time.
- **Playback Numeric Function:** When playing a recording, users can use the numeric buttons to skip to a specific point. With this set to **Percentage Move**, the unit for user-entered numbers is percentage. For example, to skip to the 35-percent point of the recording, enter "35". With this set to **Commercial skip**, users can enter 0 to 9, and the unit is minute. For example, to skip forward 5 minutes, enter "5". To skip backward 1 minute, enter "0".
- **TimeShift Device:** Determine which storage device to use for time-shift recording by default.
- **Record Device:** Determine which storage device to use for recording by default.

6 Playing Media Files

This digital TV receiver can play not only TV recordings but also many kinds of media files, including photos, music, and videos. Connect a removable hard drive or flash drive to one of the receiver's USB ports.

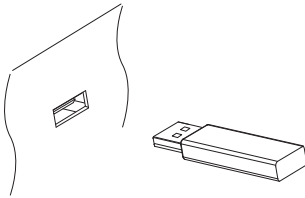

6.1 Managing Storage Devices

To manage removable storage devices connected to the receiver, open the apps screen and select **Storage**.

View a storage device's state: Choose **Current Device** and select a storage device.

Format a storage device: Storage devices must be formatted in FAT32 or NTFS for use with this receiver. Choose **Current Device** and select a storage device. Choose **Format**, choose **File System**, and then choose a file system. Select **Format** and then confirm to start formatting.

Note

Only a 32 gigabyte or smaller flash drive can be formatted in FAT32.

Test the speed of a storage device: Choose **Current Device**, select a storage device, and then press the green button.

Open the file list of a storage device for playback: Choose **Current Device**, select a storage device, and then select **Play List**.

Remove a removable storage device from the receiver: Choose **Current Device** and select a removable storage device. Press the red button and then confirm to remove it.

Check a storage device: Choose **Current Device**, select a storage device, and then choose **Storage Check**. If any faults are found, they are automatically repaired.

Access a shared folder on a computer: Choose **Current Device** and select **Network Drive**. Choose **Network Setting**, choose **Folder**, and then specify the path to the folder. A good example of shared folder paths is "192.168.1.25/media".

View the state of the user-available memory: Choose **Current Device** and select **User**.

6.2 Managing Files

Press the playlist button ▲ to access the removable storage devices connected to the receiver.

Display only files of a specific type: The chosen file type is displayed on the top left of the screen. Press the left or right navigation buttons to see files of a different type. To display all files, regardless of file type, choose **Play List**. **Imported Files** stands for videos except TV recordings.

View files on another storage devices: Press the playlist button ▲ and choose a different storage device.

Sort files: Press the yellow button and choose a category.

Create a folder: Press the blue button and select **New Folder**.

Rename a file or folder: Place the focus on a file or folder, press the blue button, and then select **Rename**. Enter a new name using the on-screen keyboard.

Move files or folders into another folder: Select one or more files or folders using the red button, and press the blue button. Select **Move to Folder** and choose a subfolder or the upper folder.

Copy files or folders onto another storage device: Select one or more files or folders using the red button, and press the blue button. Select **Copy to Device** and choose a different storage device.

Delete files or folders: Select one or more files or folders using the red button, and press the blue button. Select Delete and confirm to delete them.

6.3 Playing Recordings and Videos

Select one or more recordings or videos using the red button, and then press the OK button to play them.

Note

Some videos may not play properly, depending on how they are encoded.

Pressing the play button ► displays the progress bar. Use the progress bar to navigate through the video. To hide the progress bar, press the play button ► again.

Pause and resume playback: Press the pause button ■■, and press it again to resume.

Skip backward or forward: Press the left or right navigation button. To continuously skip, press and hold these buttons. Repeatedly pressing the yellow button changes the skip interval from 10 seconds to 10 minutes.

Skip to a specific point: Press the play button ► to display the progress bar, and then enter a number.

Play fast forward or backward: Press the forward button ►► or the back button ◀◀. Repeatedly pressing these buttons changes the playback speed.

Skip to the previous or next recording or video: Press the previous button ◀◀ or the next button ►►.

Add a bookmark to a recording: When playing a recording, users can add bookmarks to the recording for easier navigation. Press the red button to place a vertical marking bar at the current point on the progress bar. Bookmarks are preserved with the recording for later use.

Note

Only TV recordings can be bookmarked.

Jump to a bookmark: Press the green button.

Remove a bookmark: Jump to a bookmark using the green button, and then press the red button to remove the bookmark.

Change subtitle display: When a video is playing, press the **MENU** button and change subtitle display options, such as letter size and colour. For details on how to add font files, see Using Different Fonts on page 56.

Note

SMI and SRT subtitle formats are only supported by the receiver.

6.4 Viewing Photos

View the previous or next photo: Press the left or right navigation button.

Start slideshow: Press the red button. To pause and resume the slideshow, use the pause button **||**.

Slideshow Preferences

On the photo list screen, press the green button.

- **Slide Time:** Adjust the slideshow speed.
- **Repetition:** Determine whether or not to repeat slideshows.
- **Title:** Determine whether or not to display file names.
- **Downscale:** Determine whether or not to display a reduced size.

Set Save and Exit to Yes to finish.

6.5 Playing Music

Select one or more songs using the red button, and then press the **OK** button to play them.

Skip to the previous or next song: Press the previous button ◀ or the next button ▶.

Shuffle or repeat playback: Press the red button. Repeatedly pressing the red button changes the play mode.

- [R]: Songs are randomly played.
- A: Songs are played only once.
- [A]: All songs are repeated.
- [1]: The current song is only repeated.

Add songs to the current playlist: Press the green button. Select more songs using the red or green button, and then press the yellow button.

Remove a song from the current playlist: Place the focus on a song entry and press the yellow button.

6.6 Playing Media files from Other Devices

This receiver can play media files from computers or other DLNA-enabled devices, such as TVs and tablets, connected to the receiver via a network. For example, when a computer and the receiver is connected to the same network, the receiver accesses the computer to play the computer's media files, or vice versa.

Accessing Other Devices

Open the apps screen and select T Air. The file list screen appears with the list of detected devices. Select a device and then select a file to play it.

For details on how to play videos, see *Playing Recordings and Videos* on page 45, for music, see *Playing Music* on page 46, and for viewing photos, see *Viewing Photos* on page 46.

Allowing Other Devices to Access the Receiver

Open the apps screen, select T Server, and then select Start.

When Start Type is set to Auto, other devices can access the receiver at any time when the receiver is on.

7 Apps

Press the MENU button to open the apps screen. Most apps require an internet connection for proper operation.

7.1 Webzeal

Use the Webzeal app to surf the Internet.


Note


The Webzeal cannot play flash video, which is heavily used on the web.

Pressing the MENU button displays a toolbar, including a web address field and several icons, at the bottom of the screen.

Viewing a Webpage

Webzeal takes up the lower part of the screen so that users can watch live TV on the upper part.

Adjust the vertical view size: Press the red button or, alternatively, press the MENU button and select the vertical view icon . Repeatedly pressing the red button changes the view size from full screen to half and then to quarter.

Adjust the horizontal view size: Press the green button or, alternatively, press the MENU button and select the horizontal view icon .


Zooming in a webpage: Press the yellow button.


Zooming out a webpage: Press the blue button.



Navigating Webpages

A pointer is available to help users navigate webpages. Use the navigation buttons to move the pointer. To see another webpage, move the pointer over a link and press the OK button.

Enter a web address: Press the MENU button, select the web address field, and then enter a web address using the on-screen keyboard.

Refresh a webpage: Press the MENU button and select the refresh icon .


Halt a webpage from downloading: Press the MENU button and select the stop icon .

Move between the series of webpages that have already been viewed: Press the MENU button and select the back icon  or the forward icon .

View the web browsing history: Press the RECALL button to display the list of recently-visited webpage. Select a webpage to open it.

Bookmarks


Bookmark the current webpage: Press the FAV button and press the red button.

Open a bookmarked webpage: Press the FAV button to display the list of bookmarked webpages. Alternatively, press the MENU button and select the bookmark icon . Select a bookmark to open it.


Delete a bookmark: Press the FAV button and place the focus on a bookmark. Press the yellow button and confirm to delete it.

Edit a bookmark: Press the FAV button and place the focus on a bookmark. Press the blue button and edit the web address using the on-screen keyboard.

Set the current webpage as home page: Press the FAV button and press the green button.

Open the home page: Press the MENU button and select the home page icon .

Entering Text

Switch to a different language keyboard: Press the MENU button and select the keyboard icon . A list appears, showing available keyboard layouts. Choose a keyboard layout, and then choose a keyboard language. Restart the Webzeal to put the chosen keyboard into use.

Switch between the numeric keypad and the normal keyboard: Press the MENU and press the green button.


Enter text into a field: When the pointer is over a text field, pressing the OK button displays available typing actions. Choose Input Text and enter text using the on-screen keyboard.

7.2 YouTube

Use the YouTube app to watch videos from the YouTube website.

View videos in a specific category: Press the green button and choose a category.

Search for videos: Press the yellow button and enter search criteria using the on-screen keyboard.

Download a video: Place the focus on a video entry and press the record button .

View the list of downloaded videos: Press the red button.

Playing Videos

Select a video from the list of videos to play it.

Note

Some videos may not play properly, depending on how they are encoded.

View in full screen: Press the OK button. To exit full screen, press it again.

Pause and resume playback: Press the pause button **⏸**, and press the play button **▶** to resume.

Skip backward or forward: Press the back button **◀** or the forward button **▶▶**

7.3 Free TV+

Free TV+ allows users to view videos from a variety of video-sharing web services, such as Dailymotion. Users can either view videos online or download them for later enjoyment.

7.4 iTV+

Use iTV+ to watch internet TVs.

Tune in to a TV station: Select a TV station.

View in full screen: Press the green button. To exit full screen, press it again.

Add a TV station: Press the red button. Specify the TV station's details, including name and web address, and then select **Add** to finish.

Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

Edit a TV station: Place the focus on a TV station entry and press the blue button. Change the details, and select **OK** to finish.

Delete a TV station: Place the focus on a TV station entry and press the blue button. Select **Delete** and confirm to delete it.

Search for TV stations: Press the yellow button and enter search criteria using the on-screen keyboard.

View information about a TV station: Place the focus on a TV station entry and press the **Info** button.

7.5 iRadio+

Use iRadio+ to listen to internet radios.

Tune in to a radio station: Select a radio station.

View radio stations in a specific category: Press the red button and choose a category.

Add a radio station: Press the green button. Specify the TV radio's details, including name and web address. Select **Add** when finished.

Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

Edit a radio station: Place the focus on a radio station entry and press the yellow button. Change the details, and select **OK** to finish.

Delete a radio station: Place the focus on a radio station entry, press the blue button, and then confirm to delete it.

7.6 TV Portal+

TV Portal+ is a web portal, run by this receiver's manufacturer, that brings together web content dedicated for consumer electronics from diverse websites.

There are multiple web categories, including news and multimedia.

Use the navigation buttons to navigate the web categories and the **OK** button to select an item. Press the **RECALL** or **EXIT** button to return to the previous screen.

Note

Web categories and items in each category may change.

7.7 Torrent Player

Many people use μ Torrent, a peer-to-peer file sharing program, to share media files. Torrent Player can communicate with μ Torrent on a computer to play media files downloaded by μ Torrent.

Before using Torrent Player, make sure that μ Torrent is installed on a computer on the same network as the receiver.

Start Torrent Player, and a list appears showing computers on which μ Torrent is running and computers that have been connected to Torrent Player. Select a computer to connect it to Torrent Player. If this is the first connection, enter the number displayed on the receiver's screen into μ Torrent's dialog box.

Selecting a media category displays a list of files of the same type that are currently managed by μ Torrent. Select a media category, and then select a file to play it.

The Torrent category displays the torrents list. Selecting a torrent shows all the files contained in it. Select a file to play it.

Note

It is not possible to play files that are not completely downloaded.

7.8 Weather

Use the Weather app to get weather forecasts for thousands of places around the world.

Add a city: Press the green button and enter search criteria using the on-screen keyboard. Select a city from search results.

Press the blue button and select **Delete history list**. Select one or more cities using the red button, press the **OK** button, and then confirm to delete them.

Set a city as start point: Place the focus on a city entry and press the **FAV** button.

7.9 T Apps

Users can download and install various apps provided by this receiver's manufacturer.

Download new apps: Open the apps screen and select **T Apps**. A list appears showing new available apps. Select one or more apps using the OK button, and press the red button to start downloading.

Play an app: Open the apps screen and select **T Apps**. Place the focus on an app and press the green button.

Delete an app: Open the apps screen and select **T Apps**. Place the focus on an app and press the yellow button.

T Apps Server Settings

The T Apps server's web address may need to be reconfigured properly. For information about the T Apps server, contact the local distributor.

Open the apps screen, select **T Apps**, and then press the blue button. Use the other color buttons to enter the server address, ID and password respectively.

8 Preference Settings

8.1 Language Settings

Open the **Settings > Configuration > Language Setting** menu.

- **Menu Language:** Determine what language to use for the interface.
- **Audio Language:** A TV programme may provide audio in two or more languages. Determine what audio language to use by default.
- **Audio Language 2:** Determine what audio language to use as an alternative when the default language is not available.
- **Subtitle Language:** A TV programme may provide subtitles in one or more languages. Determine what subtitle language to use by default.
- **Subtitle Language 2:** Determine what subtitle language to use as an alternative when the default language is not available.
- **Teletext Language:** A TV channel may provide teletext pages in one or more languages. Determine what teletext language to use by default.

Using Different Fonts

Users can install truetype font files on the receiver to use them with subtitles and displays.

Create a folder named “plugin\font” on a flash drive, and copy font files into it. Insert the flash drive into one of the receiver’s USB ports. A dialog box appears with the list of files that are recognized can be installed. If no dialog box appears, use the **Back-Up** app’s **Data download from USB storage**.

Open the **Settings > Configuration > Language Setting** menu.

- **User Font File:** Choose a font to use it for text display.
- **User Font Language:** Choose a language to use the font for it.

- **User Font Size Correction:** Adjust the font size.

To clear all user-installed fonts, press the red button.

8.2 Network Settings

A wired network connection is required to perform internet tasks.

- Using media apps, such as Weather and Free TV+
- Accessing a computer to play media files stored on it
- Acquiring software updates

Open the **Settings > Installation > Network Setting** menu.

It may be more convenient to set the router for dynamic IP addresses so that the receiver can automatically connect to the network. Turn on DHCP if DHCP is enabled on the router. If DHCP is not available, specify the network details, including IP address and gateway.

Proxy Server Settings

If a proxy server is used for internet connections, the settings for the proxy server must be configured properly. Open the **Settings > Installation > Network Setting** menu, and choose **Proxy Server**. Specify the proxy server's details, including port number and user account.

DDNS Settings

A DDNS account allows the receiver to create a web address that points to the user's local network, so anyone can access the receiver from anywhere in the world.

If a DDNS account is available, configure the DDNS settings properly. Open the **Settings > Installation > Network Setting** menu, and press the red button. Specify the DDNS account's details, including web address and user account.

8.3 Clock Settings

Open the **Settings > Configuration > Time Setting** menu.

- **Local Offset:** Specify the time zone where the receiver is located.
- **Daylight Saving:** To apply daylight saving time, specify the country where the receiver is located.
- **Clock Mode:** Determine which to use between 12-hour and 24-hour clock formats.

For **Wake Up Mode** and **Sleep Mode**, see **Setting Up Timers** on page 35.

8.4 Audio and Video Settings

Open the **Settings > Configuration > A/V Output Setting** menu.

- **TV Type:** Determine which TV standard to use.
- **TV Aspect Ratio:** Determine which aspect ratio to use by default.
- **Display Resolution:** Determine which resolution to use by default. Technically, 1080p is better than 1080i, but the difference is only slight to most people.
- **Display Format:** Determine how to display 4:3 pictures on the 16:9 screen, or vice versa.
 - **Pillar Box:** 4:3 pictures fit the height of the 16:9 screen with black bars on the sides.
 - **Full:** 4:3 pictures blow up to fit the width of the 16:9 screen with the top and bottom edges cut off.
 - **Pan Scan:** 16:9 pictures blow up to fit the height of the 4:3 screen with the sides cut off.
- **Video Output Mode:** Determine which colour space to use for the SCART output. RGB is much higher quality than CVBS.
- **HDMI Dolby Digital:** Determine whether or not to pass through Dolby audio via HDMI when available.

- **Dolby Digital Default:** Determine whether or not to use Dolby audio when available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use by default.
- **Audio Sync Delay:** If the sound and picture don't match up, adjust this until they match.
- **Eco Power Mode:** See Saving Energy on page 36.

8.5 On-Screen Display Settings

Open the **Settings > Configuration > Display Setting** menu.

- **Info Box Position:** Specify how much to raise or lower the position of the programme information dialog box.
- **Info Box Display Time:** Specify how long to display the programme information dialog box when changing channels.
- **Volume Bar Display Time:** Specify how long to display the volume bar when adjusting the volume.
- **Zapping Mode:** Determine what to display when changing channels. With this set to **Black Screen**, the receiver displays nothing. With this set to **Freeze**, the receiver displays the last still picture of the previous channel.
- **Up/Down Key:** Determine for what to use the up and down navigation buttons when watching a channel. With this set to **Simple Service List**, the simplified channel list is displayed. With this set to **HD Service Change**, a channel change is made between HD channels. With this set to **Service Change**, a channel change is made.
- **HbbTV On/Off:** Enable this option to make HbbTV services available.
- **Front Display Scroll:** The receiver's front display shows the current programme's title or the current menu item. Determine how the display scrolls to show longer strings. With this set to **Continuous**, it repeatedly scrolls the string. With this set to **Off**, it never scrolls the string. With this set to **Once**, it scrolls the string only once.
- **Front LED Brightness:** Adjust the brightness of the front light properly.

- **Screen Change Effect:** Choose one of the screen change effects.

8.6 Parental Control

TV programmes are rated according to their level of violence, nudity, and restricted language. It is possible to set the receiver to block programmes rated a certain class or higher to prevent children from watching them. It is also possible to lock specific apps so that children or others can't access them. Users must enter the passcode to watch a blocked programme or access a locked app.

Open the **Settings > Configuration** menu, choose **Parental Control** menu, and then enter the passcode.

- **Censorship:** Specify a programme rating.
- **Change PIN code:** Change the passcode. The default is "0000".
- **System:** With this set to **Lock**, the passcode is required when turning on the receiver.
- **Installation:** With this set to **Lock**, the passcode is required when accessing the **Installation** menu.
- **Configuration:** With this set to **Lock**, the passcode is required when accessing the **Configuration** menu.
- **Edit Services:** With this selected, the passcode is required when accessing the **CH Edit** app.
- **T Apps:** With this set to **Lock**, the passcode is required when accessing the **T Apps** app.
- **Play List:** With this set to **Lock**, the passcode is required when pressing the playlist button ▲ to access a removable storage device.

8.7 Maintaining the Digital TV Receiver

The internal flash memory is used for maintaining the preference settings and channel data.

Open the **Settings > Installation > System Recovery** menu. Use these to reset the digital TV receiver.

- **System restore to factory default:** Reset all settings to factory defaults and clear all channels.
- **Reset configuration data:** Reset all settings to factory defaults.
- **Reset service data:** Clear all channels.

Use these to back up and restore the receiver.

- **System restore to stored position:** Restore the receiver using the stored settings and channels.
- **Store system data:** Back up all settings and channels.
- **Delete stored position:** Clear all stored settings and channels.

Sharing Channel Data

It is possible to share the receiver's settings and channel data with other receivers of the same kind, using a flash drive. Connect a flash drive to one of the receiver's USB ports.

Open the apps screen and select **Back-Up**.

- **Transfer All System data to USB storage:** Export all settings and channel data to the flash drive.
- **Transfer Service data to USB storage:** Export all channel data to the flash drive.
- **Data download from USB storage:** Import settings and channel data from the flash drive.

8.8 Updating the Digital TV Receiver

Software updates for this digital TV receiver become available from time to time. Software updates may improve the receiver's performance or deal with any outstanding issues.

Open the **Settings > Installation > System Information** menu to check the current version of the receiver.

Online software updates may be available, depending on the country. Open the apps screen, select **Download**, and then select **Software Upgrade**. Selecting the server name displays a list of available updates. Select one or more items, and press the red button to download and install them.

Appendix A

Universal Remote Control

The remote control can expand its capabilities, allowing users to control a TV connected to the receiver.

A user can transform the remote control into a universal remote control by entering a 4-digit code for the TV.

1. Find the TV's brand name from the list of TV codes.
2. Press and hold the **TV** button for 3 seconds, and it keeps blinking until any button is pressed.
3. Enter one of the available TV codes. If the TV code matches one that the remote control has, the **TV** button blinks three times, which indicates that the TV code is set to be used. Otherwise, the **TV** button becomes off.
4. Press the **TV** button to see if the TV code works. If the TV gives no response, repeat these steps to try another TV code.

If all of the codes appear not to work, follow these steps:

1. Press and hold the **TV** button for 3 seconds.
2. To find a right TV code, repeat pressing the up or down navigation button until the TV responds. Pressing and holding either of these buttons allows up to eight consecutive attempts.
3. When the TV turns on or off, press the **OK** button to set the found code to

be used. The TV button blinks three times.

It is possible to identify what TV code is currently set for the TV. Press and hold the TV button for 3 seconds. Press the OK button, and the TV button blinks as much as the number of each digit of the TV code with a pause between the digits. To indicate "0", it blinks four times with a faster pace than for the other numbers.

A

A.R. Systems	8644, 7213, 6896, 5090, 7014	6381, 2810, 6896, 4783, 8020, 8394, 4469, 3488, 5393, 2796, 6305, 3840, 7733, 4659, 3451, 5905, 4925, 4523, 3802, 3637, 5874, 4648
Accent	7647, 8644, 6896, 3637	
Acer	3857	
Action	4523, 5510, 3637, 4648	Akashi 7314, 7647
Adcom	4884	Akiba 4016, 5896, 7014, 8644, 6896
ADL	7855	Akira 5553
Admiral	3193, 2438, 5553, 5605, 3488, 3637, 4648,	Akito 8644, 6896
Adventura	5874	Akura 8644, 6896, 5355, 6764, 7647, 4016, 5896, 3488, 8060, 7066, 3637, 4648
Adventuri	5874	
Adyson	4469, 4523, 4648	Alaron 4469
AEA	8644, 6896	Alba 8644, 3840, 6896, 8060, 7647, 5553, 7287, 4530, 5355, 7384, 4016, 4469, 5531, 5605, 6230, 6812, 7733, 5119, 4925, 3637, 4648
AEG	5952, 6305, 5319	
Agashi	4469, 3488	Alfa 4648
AGB	8568	Alkos 6482
Aiko	7647, 8644, 6896, 4469, 4530, 6482, 5739, 3350, 3518, 3488, 3637	Allstar 8644, 6896, 4648
Aim	8644, 6764, 6896, 3036, 7910, 8435, 8484,	All-Tel 4677
Aiwa	5448, 7733, 6736	American High 5510
Akai	3350, 7910, 4530, 3011, 8644, 5739, 6669, 3518, 6482, 7647, 3036, 4016, 2429, 8060, 5605, 8568,	Americana 5510
		Amplivision 7287
		Amstrad 7647, 8568, 3488, 4530, 4016, 8644, 6896, 5739,

6764, 8377, 3840, 3451,
7066, 3637

Anam 8644, 6896, 7647, 4526

Anam National 8644, 6896, 4526

Andersson 5319, 7660

Anglo 7647, 3488, 3637

Anitech 7647, 3488, 8644, 6896,
5896, 4523, 3637, 4648

Ansonic 7287, 8644, 6896, 7647,
5355, 5090, 5090, 2620,
5531, 4917, 3637

AOC 4523, 4648

Apollo 4659

Arcam 4469

Arc en Ciel 7430

Ardem 2590, 8060, 8644, 5613,
6896

Aristona 6896, 8644, 4648

ART Tech 4648

Arthur Martin 5605

ASA 4819, 6092, 4265

Asberg 8644, 6896, 4648

Asora 7647, 3637

Astra 8644, 6896, 3637

Asuka 4016, 4469, 3488, 5896

ATD 2924

Atlantic 8644, 6896, 4469, 4648

Atori 7647, 3637

Atoro 3637

Auchan 5605

Audiosonic 7647, 8644, 5090, 8033,
6896, 7430, 8060, 6381,
7287, 3488, 4016, 2590,
3637, 4648

Audioton 2590, 7287, 3488, 3637

Audiovox 4648

Audioworld 2924

Autovox 5531

AVP 7733

AWA 7507, 6812, 7647, 5090,
6764, 8644, 6896, 4469,
6305, 5620, 3488, 4698,
3637

Axxent 7647

Axxon 8060

B

B&D 7855

Baird 7430, 6127, 6982, 5301,
7910, 3453

Barco 5605

Basic Line 3637, 4648, 5090, 8644,
5605, 5355, 6896, 7647,
4016, 5896, 7014, 6559,
3840

Bauer 8484, 7647

Baur 7647, 6640, 5265, 3835,
8644, 6896, 3518, 3350,
6736, 3637, 5874, 4648

Beaumark 5393

BEC 4648

Becrese 4523, 3802, 5874, 4648

Beko 8060, 6482, 2590, 7287,
8644, 5553, 3840, 6896,
6305, 6381, 7361, 4648

Bell & Howell 4648

Belson 4156, 4706

Benchmark-Beaumark 4523, 5510, 3637,
4648

Bennett	6896, 8644
BenQ	8016
Beon	8644, 6896, 5553, 4648
Berthen	5355
Best	7287
Bestar	8644, 6896, 7287, 5090, 4648
Bestar-Daewoo	5090
Bigston	3637
Black Diamond	5319, 8033, 3840, 6896, 7837, 3036
Black Star	5531
Black Strip	6482, 3802, 5510
Black Way	5896, 4016
Blaupunkt	3518, 6640, 5265, 6538, 7839, 5186, 7014, 4849, 6812
Blue Sky	8644, 8060, 3840, 6230, 5355, 6381, 2499, 6896, 4016, 5896, 7014, 7733, 4156, 7361, 6685, 4648
Blue Star	5896
Bondstec	5531
Boots	7647
Bosch	7839
BPL	8644, 6896, 5896
Brandt	4884, 7430, 4422, 3270, 6982, 3847
Brandt Electronique	4422, 3270
Brend Star	3637
Brinkmann	8644, 6896, 5355, 7350, 5553, 2590
Brionvega	8644, 6896, 8377, 4648
Briorryega	4648

Britannia	4469
Brockwood	4523, 3802, 5874
Broksonic	4523, 3802, 5874
Brother	3488
Bruns	2590
BSR	5605, 3350
BTC	4016
Bush	5355, 4016, 5605, 7647, 6812, 8644, 4530, 5896, 7384, 2438, 5090, 7350, 3488, 3350, 3840, 6230, 7910, 5952, 5905, 2924, 6896, 8060, 5832, 7733, 5453, 3802, 4648

C

Cample	4523, 3802, 5874
Candle	4523
Canton	4016
Capehart	4523, 3802, 4648
Capsonic	3488
Carad	2696, 8644, 6896, 5355, 3840
Carena	7014, 8644, 6896
Carrefour	6812, 4265, 8644, 6896, 4648
Carver	4849, 4648
Cascade	7647, 8644, 6896
Casio	8644, 6896, 5605, 4648
Cathay	8644, 6896
CCE	8644, 6896
Celestial	6498, 8033, 7837
Centrex	7046, 5397
Centrum	3840

Centurion 8644, 6896, 4648
 Century 5531
 CGE 4752, 6634, 5553, 5531,
 7287, 5605, 3637
 CGM 3637
 CIE 3637
 Cihan 4648
 Cimline 7647, 4016, 3637
 Cinex 3451, 5952
 Circuit City 4523, 3802, 5874
 Citizen 4523, 5510, 4648
 City 7647, 3637
 Clarivox 5553, 8644, 6896, 4265
 Clatronic 8644, 7287, 4530, 8060,
 4016, 3488, 6896, 5531,
 7647, 3451, 6305, 5319,
 3637
 Clayton 3840
 CMS 4469
 Cobolt 5397
 Colortyme 5510, 4648
 Combitech 7733
 Computron 3637
 Concorde 7647, 3637
 Condor 8644, 6896, 7287, 4469,
 7647, 5896, 5531, 5553,
 2620, 5605, 3488, 3637,
 4648
 Conia 3491, 7837, 4706, 8033
 Conic 4523, 3802, 4648
 Conrac 7361
 Conrad 8644, 6896

Contec 4469, 7647, 7507, 6812,
 3488, 8644, 6896, 3802,
 3637
 Continental Edison 7430, 4422, 6230
 Coronado 4523
 Cosmel 7647, 8644, 6896, 3637
 Craig 4648
 Crosley 5531, 4752, 6634, 5605,
 3802, 5874, 4648,
 Crown 7647, 5716, 7287, 2590,
 8644, 6896, 6230, 8060,
 6305, 6381, 5553, 7910,
 4638, 6559, 3840, 4523,
 3637, 4648

Crystal 4648
 CS Electronics 4469, 4016, 5531
 CTC 5531
 CTX 8016
 Curtis Mathes 4523, 3802, 5510, 4648,
 3193
 Cybertron 4016, 3802
 Cytronix 3191

D

Daewoo 5295, 5090, 2499, 4874,
 3876, 8644, 6896, 7647,
 4469, 4016, 6286, 7733,
 3118, 2016, 3620, 4677,
 4523, 3637, 4648
 Daichi 3637
 Dainichi 4016, 4469
 Daitso 4201
 Dansai 8644, 6896, 3488, 6482,
 4469, 7647, 6812, 7910,
 4523

Dansette 6764
 Dantax 7287, 2590, 8060, 6305,
 6381, 7733
 Datsura 7910
 Dawa 7647, 8644, 6896, 4648
 Daytek 2924, 4979, 8435, 4698
 Dayton 4979
 Daytron 7647, 5090, 8644, 6896,
 4523, 3637
 DEC 4167, 7314, 5397
 Decca 8568, 8644, 6896, 6286,
 7733, 4648
 de Graaf 7910, 5605, 4783, 2438
 Deitron 8644, 6896, 5090, 4016
 Denko 3488
 Denver 8644, 6896, 6305, 4485,
 8299, 3637
 DER 6127
 Desmet 8644, 6896, 7647, 3637,
 4648
 Diamant 8644, 6896
 Diamond 3488, 2924, 7647, 4777,
 4469, 4530, 7314, 8033,
 3637
 Digatron 8644, 6896
 Digihome 7660
 Digiline 8644, 6896, 4819, 5355
 DigiLogic 8644, 6896
 Digatek 8033
 Digator 8644, 6896, 6641
 Digation 3350
 DigiX 3118
 DiK 8644, 6896

Dixi 7647, 8644, 6896, 5531,
 3637, 4648
 DL 5397, 7046, 8644, 8299,
 4677
 Domeos 5355
 Domland 3158
 Dream Vision 8561
 DSE 6641, 5952, 8033
 DTS 7647, 3637
 Dual 6982, 7350, 8644, 6896,
 7213, 3158, 5605, 6286,
 8394, 7660, 3840, 4648,
 3637
 Dumont 4265, 4523, 3802, 5874
 Dunai 5605
 Durabrand 8644, 4917, 6896
 Dux 8644, 6896
 D-Vision 8644, 7066, 6896
 DVX 5397
 Dynamic 3637
 Dynatech 4523, 3802, 5874
 Dynatron 8644, 6896

E

Easy Living 4596, 5905
 Eaton 5510
 Ecco 2335, 8435
 ECR 3802
 Edison-Minerva 6230
 Elbe 3444, 8377, 7287, 5605,
 8644, 6896, 4016, 3518,
 2620, 2696, 8568, 3350
 Elbe-Sharp 8568
 Elbit 4648

Elcit	5531, 8568, 5605
Elecs	4648
Electratune	4523
Electro Tech	3637
Electrobrand	5874
Electrohome	4523, 3802, 5874
Elektronika	4648
Elekta	7647, 8644, 6896, 3488, 5896, 3637
Elfunk	3573, 3840
ELG	8644, 6896
Elin	4469, 8644, 6896, 4819, 4783, 3350, 5605, 7647, 3637, 4648
Elite	4016, 8644, 6896, 4523, 3802, 5510, 4648,
Elta	7647, 3488, 4469, 3637
Emco	5531
Emerson	8060, 5393, 5531, 8644, 6896, 4530, 4265, 5896, 3350, 2499, 2590, 7287, 5605, 5355, 4523, 3802, 5874
Emperor	5896
Enzer	3036
EON	3802, 5510
Erres	8644, 6896, 4648
Estèle	5605
Etron	4709, 8644, 6896, 7647, 5605, 8033, 3637,
Eurofeel	3488
EuroLine	8644
Euroman	4469, 3488, 8644, 6896, 7287

Euromann	4648
Europa	8644, 6896
Europhon	8644, 8568, 5605, 6896, 5531, 4469, 4648,
Evesham	4596
Excel	8644, 6896
Expert	5605
Exquisit	8644, 6896, 5531

F

Fagor	8644, 6896
Fairtec	4156
Family Life	8644, 6896
Fast	3634
Fenner	5090, 7647, 3637
Ferguson	5301, 4884, 4422, 3270, 6127, 7430, 3847, 8644, 6896, 6482, 6982, 4638, 5620, 3350, 4783, 5119, 3840, 4648
Fidelis	3637
Fidelity	5605, 3835, 2438, 8644, 6896, 4530, 6764, 6127, 4469, 3488, 7733, 3350
Filsai	3637
Finlandia	7910, 6092, 4783, 3350, 5605, 2438, 4422, 6982
Finlux	4819, 8644, 6896, 8060, 6092, 5605, 8568, 6381, 4265, 2620, 8394, 6753, 8020, 5952, 4659, 5553, 6305, 7361, 3637, 4648
Firstline	8644, 6896, 5090, 5355, 8060, 5605, 7647, 4469, 5531, 2499, 2620, 7910,

3350, 3840, 4156, 7361,
6685, 5319, 3637, 4648

Fisher 6812, 7910, 7287, 3350,
5605, 3802

Flint 8644, 6896, 2696, 4016,
7014, 3488, 4648,

Force 7660

Forgestone 6127

Formenti 5605, 8644, 6896, 2590,
4469, 4648

Formenti-Phoenix 4469

Fortress 3193, 4523, 3802

Fraba 8644, 6896, 7287

Friac 7647, 8644, 6896, 7287,
4874, 2696

Frontech 5531, 3488, 2438, 7647,
5605, 3637

Fujimaro 4677

Fujitsu 5605, 7647, 7213, 8644,
6896, 3350, 8360, 4523,
3802, 5874

Fujitsu General 7647, 5605

Fujitsu Siemens 3191, 5905, 5319

Funai 5355, 3488, 6764, 4523,
3802, 5874

Furichi 7314

Futronic 3488, 4167, 7314

Future 8644, 6896

G

Galaxi 8644, 6896, 3350, 5605

Galaxis 7287, 5553, 8644, 6896

Galeria 7647, 3637

GBC 5605, 7647, 5090, 4016,
2438, 3637

GE 6982, 5393, 5896, 3847,
4422, 7430, 3270, 4884

Geant Casino 5605

GEC 5605, 3350, 8644, 8568,
6896

Geloso 5531, 7647, 2438, 5605,
5090, 3637

Gemsound 3637

General 7430, 4422, 3637

General Electric 6982, 4422

General Technic 3637, 7647

Genesis 7647, 8644, 6896

Genexxa 4016, 8644, 6896, 6764,
5605, 7647, 4648,

Gericom 4677, 3191, 7855, 3118

Gitem 4648

GM 3637

GMG 3637

Goldfunk 5355

Goldhand 4469, 3637

GoldStar 8644, 7647, 7287, 4709,
2796, 5393, 5531, 4469,
6896, 5605, 3350, 7430,
2438, 6305, 8060, 6381,
7014, 4523, 5510, 4648

Gooding 6230

Goodmans 5295, 5905, 3840, 8644,
4874, 6896, 8060, 5355,
2499, 5090, 6812, 3488,
8568, 7647, 6230, 4530,
6982, 6482, 8020, 3847,
3270, 4016, 7733, 3876,
5832, 3118, 6948, 8299,
4698, 3637, 4648,

Gorenje 7287
 GPM 4016, 3637
 Gradiente 4638, 4849, 8644, 6896
 Gradin 3637, 4648
 Graetz 8060, 3350, 4530, 5605,
 8644, 6559, 6896, 5319
 Granada 8644, 6896, 3001, 5620,
 4659, 3270, 3847, 5605,
 7910, 6812, 6559, 8568,
 2438, 3952, 6982, 4783,
 4648
 Grandin 8644, 6896, 7647, 5605,
 5090, 5896, 4016, 7014,
 2696, 8060, 6381, 5355,
 3840, 4677, 4156, 3118
 Granprix 3451
 Grenadier 3637
 Gronic 5605
 Grundig 5265, 4679, 6640, 3518,
 8435, 6896, 8299, 7647,
 4265, 6230, 8644, 5119,
 6812, 7287, 4925, 7733,
 6948, 5393, 4698, 6982
 Grunkel 5319
 GTT 3637

H

H&B 7361
 Haaz 8435
 Haier 2924, 3488
 Halifax 3488, 4469
 Hallmark 4523, 3802, 5874
 Hammerstein 3488
 Hampton 4469

Hanimex 4016, 7733
 Hanseatic 8644, 6896, 4874, 7350,
 5605, 3350, 5896, 3158,
 5295, 7287, 3876, 7647,
 7361, 2590, 3637, 4648,
 2796, 8060
 Hantarex 7647, 8644, 6896, 8568,
 3637, 4648
 Hantor 8644, 6896
 Harley Davidson 4523, 3802, 5510, 5874
 Harrad 4523, 3802, 5874
 Harsper 4677
 Harvard 4523, 3802, 5874
 Harwa 2335, 3453, 7789
 Harwood 7647, 6764, 8644, 6896,
 6230
 Hauppauge 8644, 6896
 HCM 7647, 6764, 8644, 6896,
 4016, 5553, 5896, 3488,
 3637
 Heathkit 5874, 4648
 Hedzon 6896, 8644
 Hema 7647
 Hicon 2519
 Hifivox 7430
 Higashi 4469
 Highline 3488, 8644, 6896
 Hikona 4016
 Hiline 3637
 Hinari 7910, 8644, 6896, 7647,
 4016, 6812, 5605, 7384,
 5119, 6230, 3488, 7733,
 3802, 3637, 4648,
 Hisawa 5896, 4016, 7014, 2696,
 7733, 8060

Hisense 6685, 7910

Hitachi 3952, 6069, 4889, 6812, 6896, 7430, 2438, 4783, 5620, 4659, 5605, 6982, 6619, 5295, 7040, 5393, 8568, 6972, 4874, 8644, 6286, 4819, 6753, 4737, 4648

Hitachi Fujian 5620, 3952

Hitsu 7647, 2696, 7014, 4016

HMV 6127

Höher 8060, 5952, 4677

Home Electronics 6305

Horizont 4648

Hornophon 8644, 6896, 4648

Hoshai 4016, 7014, 5896

Huanyu 5090, 4469

Hugoson 3094, 7855

Hygashi 4469

Hyper 7647, 4469, 5531, 3637, 4648

Hypersonic 3350

Hypson 8644, 6896, 8060, 6381, 3488, 5896, 7014, 7733, 3840, 5355, 2590, 3637, 4648

Hyundai 8644, 4677, 6896, 8435, 7314, 3036, 3620, 5952

I

Iberia 8644, 6896

ICE 3488, 8644, 4530, 7647, 6896, 4016, 4469, 3637, 4648

Ices 4016, 4469

Ict 8644, 6286, 6896

ILSonic 4698

Iiyama 7855, 3094

IMA 4523, 3802, 5874

Imperial 8644, 5605, 7287, 4752, 6634, 6896, 2620, 3350, 5553, 5531, 4648

Indiana 8644, 6896, 4648

Infinity 4648

InFocus 3251

Ingelen 6230, 2696, 8060, 5605, 3350

Ingersoll 7647, 3637

Inno Hit 7647, 8644, 6896, 4016, 3637, 4648, 5896, 5319, 8568, 5531

Innovation 7350, 8644, 6896

Innowert 4677, 3191

Inotech 2335, 8033

Interactive 8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 2620

Interbuy 7647, 8644, 3488, 5531, 3835, 6896, 3637,

Interdiscount 4648

Interfunk 8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 5531, 6538, 4648

Internal 8644, 6896, 4874, 5090, 2499

International 4469

Intervision 5896, 7014, 8644, 4530, 2796, 7350, 2590, 7287, 3488, 5531, 7647, 6896, 3158, 6230, 4016, 5605

Irradio	7647, 8644, 6896, 4016, 5531, 4530, 3637, 4648
IST	4648
Isukai	4016, 8644, 6896, 5896, 7014, 4648
ITL	3637
ITS	8644, 4530, 4016, 5896, 3488, 4469, 7647, 6896, 3637
ITT	5605, 8020, 3350, 4659, 4783, 6127, 6092, 6559, 7910, 2696
ITT Nokia	3350, 4783, 5605, 4659, 6305, 2696, 8394, 2438, 8020, 6092, 7910, 6559
ITV	3488, 8644, 6896, 5531, 5090

J

JBL	4648
JCB	5874
JDV	7066
Jean	6812
JEC	6482
Jetpoint	5510, 4648
JMB	8644, 4874, 5295, 5090, 6896, 5119, 7733,
Jocel	5716
Jubilee	6896
Jumbotroic	4648
JVC	4638, 6812, 6127, 4530, 4016, 6305, 5553, 3193, 4526, 3802, 4648

K

Kaiser	4648
Kaisui	4016, 5896, 8644, 6896, 4469, 7014, 7647, 3637, 4648
Kambrook	2796
Kamp	4469
Kapsch	5605, 3350
Karcher	8644, 6896, 7287, 2696, 5605, 5896, 3488, 5453, 8060, 5952, 6305, 3637, 4648
Kathrein	6896, 8644
Kawa	4530
Kawasho	4469
KB Aristocrat	5605
Kendo	2696, 8644, 6896, 5605, 7350, 3835, 7287, 2796, 2438, 2620, 5531, 8377, 3451, 3840, 4917, 2590, 3637, 4648
Kendwood	4523
Kennedy	5605, 3444
Kennex	3840
Kenwood	4819
Kingsley	4469
Kiota	4709, 3637
Kiton	6896, 8644, 5355
KLH	4523, 3802, 5874
Kloss	5510
Kneissel	8644, 7287, 2696, 2620, 5090, 4874, 6896, 3444, 8377, 7733
Kobic	3637
Kobra	2519

Kolster 8644, 6896, 5531, 4016, 4648
 Konichi 7647, 3637
 Konka 8644, 6896, 4530, 8060, 5553, 4016, 8485, 8299, 3491, 4706
 Kontakt 6230
 Korpel 8644, 6896, 4648
 Korting 7287
 Kosmos 8644, 6896
 Kotron 6764, 3488
 Koyoda 7647
 KTV 4523, 3802, 5874
 Kuasho 4523, 4648
 Kuba 5605
 Kuba Electronic 5605
 Kyoshu 6764, 5553, 3488
 Kyoto 5605, 4469

L

L&S Electronic 4677, 8060
 LaSAT 2590, 7287
 Lavis 3840, 8644, 5605
 Leader 7647, 3637
 Lecson 8644, 6896
 Legend 7647, 3637
 Lemair 2620
 Lenco 8644, 7647, 5605, 5090, 6896, 8299, 3840, 3637, 4648
 Lenoir 3637, 7647
 Lesa 5531

Levis Austria 8644, 6896
 Lexsor 3453
 Leyco 3488, 8644, 6896, 4648
 LG 8644, 5393, 7287, 7647, 7430, 2924, 6381, 8265, 2796, 5447, 4709, 6896, 4156, 6944, 4312, 5531, 8060, 4469, 5605, 6305, 3350
 Liesenkötter 7839, 8644, 6896, 4648, 8644, 7839, 5186, 6896
 Life 3637
 Lifetec 8644, 7647, 7350, 5090, 5355, 3835, 3840, 6286, 6896, 4016, 3488, 4596, 8060, 3637, 4648,
 Linitron 4523, 3802
 Lloyd 4523, 3802, 3637, 5874
 Lloyd's 4709, 7647
 Lodos 3840, 7660
 Loewe 3835, 5613, 7337, 8644, 6896, 7287, 8377, 8568, 4648
 Logik 7507, 2924, 2335, 7647, 6127, 3488, 4530, 4709, 3118, 7855, 3840
 Logix 5355, 7350
 Luker 7066
 Luma 8644, 2438, 5605, 2620, 6896, 5090, 7647, 8377, 3637, 4648
 Lumatron 2438, 8644, 6896, 8377, 5605, 3350, 3488, 5301
 Lux May 4648, 8644, 7647, 6896

Luxor 5319, 2438, 8020, 6753,
6092, 4659, 3840, 8394,
3350, 7910, 4783, 5605

LXI 5393, 4648

M

M Electronics 3637, 4648

Macys 4523, 3802

Madison 8644, 6896

Magnadyne 5531, 8568, 5605, 3637,
4648

Magnafon 4648, 8568, 4469, 5301

Magnasonic 4523, 3637, 4648

Magnavox 8644, 6896, 6812, 7046,
3802, 4648

Magnum 3451, 8060, 8644, 6896,
6381, 3730

Mandor 3488

Manesth 8644, 6896, 3488, 6482,
5605, 2438, 4648,

Manhattan 8644, 6896, 5355, 3840,
4201, 5605, 5453,

Marantz 8644, 6896, 6764, 4648

Marcys 3802

Mark 8644, 6896, 4469, 5090,
7647, 8060, 6381, 4648

Master's 4874, 8644

Masuda 4016, 4530, 7647, 3488,
8644, 6896

Matsui 8644, 6896, 6230, 7647,
5605, 8568, 6482, 7910,
7507, 7384, 6812, 4530,
5265, 3518, 3270, 8060,
5739, 5119, 2438, 7014,
7733, 3840, 3637, 4648

Matsushita 4526

Matsuiama 8299

Mava 4523

Max-Multi 4648

Max-Tip1 3637

Max-Tip4 4648

Maxam 3488, 3637

Maxdorf 2335

Maxell 3637

Maxim 7066, 5952

MCE 7647, 3637

Mediator 8644, 6896, 4648

Medion 8644, 8060, 7361, 7350,
2924, 7733, 3840, 4917,
5355, 6896, 3835, 6286,
5832, 4596, 3118, 3730

Megas 2696

Megatron 5393

MEI 3840, 8644, 6896

Meletronic 6092, 8644, 3835, 7430,
2620, 5605, 4422, 6896,
6982, 5531, 4819, 5090,
5295, 3350, 3518, 5265,
7647, 8020, 6753, 4469,
3876, 8060

Memorex 7647, 5393, 4526, 3637

Memphis 3637, 7647

Mercury 4709, 8644, 7647, 6896,
3637

Merritt 4783, 3350, 5605

Metz 2769, 6975, 5313, 2410,
8644, 6896, 8299, 5355,
5319, 5265, 6640, 3518,
3840, 7324

MGA 5393, 8644, 6896, 4016

Micromaxx 8644, 6896, 5355, 3840,
7361

Microstar 7361

MicroTEK 8033

Midland 4523

Mikomi 7660

Minato 8644, 6896

Minerva 6230, 6640, 5265, 4265,
3518, 8568, 5620,

Minoka 6764, 8644, 6896, 4648

Mirror 5832

Mistral Electronics 6127

Mitsubishi 5620, 3193, 3835, 8644,
5393, 6812, 6127, 6640,
6896, 7910, 3840, 3802,
3637, 4648

Mitsuri General 5605

Mivar 7287, 4469, 4318, 8568

Monaco 7647

Monitor 5510

Morgan's 8644, 6896

Motorola 3193, 4648

MTC 7287, 3835, 5605, 4469,
3350, 4523, 5510,

MTLogic 8060, 6948

Multibroadcast 6127

Multitec 8644, 6896, 2590, 5355,
3840, 5952

Multitech 7647, 2438, 2590, 8644,
7287, 6896, 4469, 5531,
3488, 4523, 3802, 3637,
5874, 4648

Murphy 4469, 5605

Musikland 8644, 4016, 5531, 6896

MyCom 4698, 5393

Myryad 6896, 8644

N

NAD 5393, 3350, 5605, 3802

Naiko 8644, 7066, 6305, 6896

Nakimura 5090, 8644, 6896

Namsunc 3637

Naonis 2438, 5605

NAP 4648

Narita 7066

NAT 3001

National 3001, 4648

NEC 4849, 8299, 7976, 3726,
8644, 6896, 7507, 8561,
6812, 7014, 7647, 5090,
4874, 4638, 3876, 3637,
3802, 5510

Neckermann 8644, 3518, 7287, 6736,
5553, 5531, 2620, 2438,
6538, 6896, 5605, 7839,
3835, 3637, 5874, 4648

NEI 8644, 6896, 4530, 5605,
4648

Neovia 4677, 4698

Nesco 5531, 7733

Netsat 8644, 6896

Neufunk 8644, 7647, 6896, 2696,
4016, 5896, 8060, 8644,
7647, 6896, 6982, 3637,
4648

New World 4016

Nicamagic 4469

Nikkai 4016, 8644, 6896, 3488,
6482, 4469, 7647, 6812,
4523, 4648

Nikkei	8060
Nikko	5393
Nissan	5510
Noblex	3637
Nobliko	4265, 4469
Nogamatic	7430
Nokia	3350, 5605, 8020, 4783, 5090, 8394, 6305, 6092, 6753, 4659, 6559, 7910, 2696, 7430, 5510, 3637, 4648
Noname	4648
Nordmende	7430, 8060, 5397, 4422, 6896, 3270, 5605, 5905, 3847, 6982, 5265, 8644, 4648
Norfolk	5605
Normerel	8644, 6896
Novabeam	4648
Novak	8644, 6896
Novatronic	8644, 4819, 5090, 6896, 3637, 4648
Nurnberg	5605, 3350
NU-TEC	7014, 2924

O

O General	3637
Oceanic	5605, 3350, 7910, 4659, 4783, 8020
Odeon	3488
Okano	7287, 8644, 6896, 3488, 7647, 3637
Olidata	4698
Olympic	3637

Omega	3488
Omni	7046, 5397, 2924
Onceas	3637
Onwa	4530, 2810, 4016, 5739
Opera	8644, 6896, 4648
Optimus	4526
Optonica	3193
Orava	4648
Orbit	8644, 6896, 4648
Orcom	4262
Orient	3637
Orion	8644, 5119, 7384, 6896, 6764, 8568, 7733, 3118, 8060, 7507, 7647, 3488, 3453, 3637, 5874, 4648, 4523, 3802
Orline	8644, 4016, 6896
Ormond	5355, 3840, 8644, 6896
Orsowe	8568
Osaki	4016, 3488, 8644, 6764, 5090, 7384, 6896,
Osio	8644, 6896
Oso	4016
Osume	6812, 4016, 8644, 6896
OTF	3637
Otto Versand	3802, 3637, 5874, 7350, 3518, 3350, 7430, 3001, 6736, 6812, 3193, 3835, 5531, 7647, 5896, 6982, 8644, 6896, 6640, 5265, 8568
OVP	4648

P

Pace	7733
------	------

Pacific 8644, 6896, 6286, 8060, 3840, 5119

Pael 4469

Palladium 7287, 8644, 2620, 8060, 5553, 6896, 5531, 7839, 6286, 3518, 6736, 6538, 5605, 7350, 2438, 4648

Palsonic 3488, 6764, 8644, 2796, 4709, 5553, 5453, 3453, 4016, 2924, 6896, 2335

Panama 7647, 3488, 4469, 8644, 6896, 5531, 3637,

Panashiba 4709, 3637

Panasonic 4526, 5620, 3001, 3350, 5605, 4783, 7605, 4709, 2410, 8568, 8644, 6896, 8360, 5393, 4648,

Panavision 8644, 2620, 6896

Panavox 3637

Panorma 3637

Papouw 8644, 6896

Pathe Cinema 5605, 4469, 7287

Pathe Marconi 7430

Pausa 7647, 3637

PCE/PEC 4523, 3802, 5510

Penney 4523, 5510

Perdio 5605, 8644, 4469, 5896, 6896

Perfekt 8644, 6896, 4648

Performance 3802, 5874

Philco 6634, 4752, 5553, 5531, 5605, 7287, 8644, 6896, 3802, 3637, 4648, 7350

Philex 6127, 5605

Philips 6896, 8644, 3518, 6127, 6538, 8016, 3802, 5874, 6982, 5090, 3350, 7647, 4648

Phocus 3730, 6948, 8060

Phoenix 8644, 6896, 7287, 2590, 5605, 4469, 4648,

Phonola 8644, 6896, 6127, 4469, 4648

Pilot 6896, 8644, 5716, 8435, 5510

Pioneer 4174, 7507, 8644, 4849, 3350, 7430, 5605, 4422, 6896, 8209, 7287, 6982, 2590, 3835, 4648, 7287, 2590

Plantron 8644, 6896, 3488, 7647, 3637, 4648

Playsonic 8060, 8644, 6559, 6381

Policom 7430, 3350, 5605, 4265, 4752, 6634, 6640,

Polytron 5896

Poppy 7647, 3637

Portland 5090, 2499, 4523, 5874, 4648

Powerpoint 6230, 8644, 6896, 2924

Prandoni-Prince 5531, 8568, 3350, 2438

Premier 7647, 3488

President 7314

Prima 7647, 3488, 6764, 7789, 4523, 3802, 5510, 3637, 4648

Princess 2924, 3637

Princeton 3840

Prinz 3350

Proelco 4648
 Profex 7647, 5605, 3350, 2438, 3637
 Profi 7647
 Profitronic 8644, 6896, 4648
 Proline 8644, 6896, 4884, 5295, 2620, 4698
 Proscan 5510
 Prosonic 8644, 6896, 7287, 5090, 4530, 5355, 8060, 4469
 Protec 3637, 4648
 Protech 8644, 6896, 7647, 5531, 3488, 5553, 5355, 5896, 5605, 2590, 3840
 Proton 5393, 4523, 3637
 Provision 4874, 8644, 6896, 3840, 8060
 Pulsar 4523, 5510, 3637, 4648, 4156
 Pye 8644, 6896, 5090, 6764, 4648
 Pymi 7647, 3637

Q

Qty1 4648
 Quadral 4016
 Quasar 5531, 4526, 4677, 7647, 6634, 5186, 4265, 4819
 Quelle 8644, 6736, 7507, 7430, 5355, 6896, 5265, 6538, 3835, 6640, 3518, 3350, 3488, 3840, 6092, 7647, 6812, 5531, 4752, 7839, 4523, 3802, 3637, 5874, 4648

Questa 6812, 3802
R
 R Line 4648
 Radialva 7430, 4016, 5605, 8644, 6896, 4422
 Radio Shock 4523
 Radiola 8644, 6896, 4648
 Radiomarelli 8568, 5531, 8644, 6896
 RadioShack 8644, 6896, 5393
 Radiotone 7647, 8644, 6896, 7287, 3488, 3840, 3637, 4648, 5553, 6764, 3451, 5355
 Rank 4265
 Rank Arena 6812, 2810, 3036
 RBM 4265
 RCA 4884, 3193, 3847, 3270, 6982, 3036, 5510,
 Realistic 5393
 Recor 8644, 5553, 6896, 4648
 Record 4648
 Rectiligne 8644, 6896
 Rediffusion 3350, 4783, 6812, 6092
 Redstar 8644, 6896
 Reflex 8644, 6896, 3840, 5355
 Regente 3637
 Relisys 4677, 2108, 4979, 3191
 Reoc 8060, 5295, 2499
 Revox 8644, 6896, 7287, 4648
 Revox/Studer 4648
 Rex 2438, 2620, 5531, 5605, 3488
 RFT 7287, 3488, 8644, 6896, 2590

Rhapsody 4469
 Rice Club 5510
 Ricoh 8644, 6896
 Rinex 2335, 5553
 R-Line 8644, 6896, 5605
 RMB 4523
 Roadstar 3840, 7647, 5553, 8644,
 3488, 5896, 4485, 5832,
 6896, 8060, 5355, 4016,
 3637
 Rodex 8644, 6896
 Rosita 3637
 Royal 3637
 Royal Lux 7287, 6764, 3270
 Rukopir 6896, 8644
 Runco 5510

S

Saba 4884, 7430, 3847, 6982,
 2104, 3270, 4783, 4526,
 4422, 5605, 8568, 3350,
 8060
 Sagem 2696, 7014, 5896, 2820,
 2517
 Saisho 8568, 7647, 7507, 5605,
 3488, 4648
 Saivod 8644, 7066, 6896, 5319,
 5355, 5716, 3840
 Sakai 5605
 Sakio 3637
 Sakura 3637
 Sakyno 7014
 Salora 5605, 3350, 8568, 2438,
 4783, 6559, 7910, 8020

Salsa 3270
 Sambers 8568
 Sampo 4523
 Samsung 2517, 8299, 8644, 5393,
 7910, 7350, 5605, 4884,
 6896, 7736, 3193, 4495,
 4523, 5510, 3637, 4648,
 7647, 7287, 3488, 4469
 Samsux 4523
 Sandra 4469
 Sanky 4523
 Sansui 8644, 2429, 6896, 8435,
 4530, 2810, 7014, 6641,
 3036, 4523, 5510, 3637,
 4648
 Santon 7647
 Sanyo 7910, 3573, 6812, 7507,
 5605, 8644, 5620, 6896,
 7287, 6559, 4469, 7647,
 2590, 4849, 3802, 3637
 Save 8644, 6896
 Saville 7733
 SBR 8644, 6896, 6127, 4648
 Schaub Lorenz 4783, 8060, 3350, 6305,
 2590, 5090, 4156,
 Schneider 6286, 8644, 6896, 7350,
 3840, 5605, 3451, 8060,
 3158, 7213, 6982, 5531,
 2499, 7733, 7066, 4265,
 4530, 3350, 4016, 5355,
 3637, 4648
 Scotland 5605
 Scott 4485, 5393, 4523, 3802,
 5874
 Sears 5393
 Seaway 5295

Seelver 6896, 3840, 8644
 SEG 8644, 6896, 3840, 4917,
 8377, 4469, 5319, 4016,
 5355, 6230, 7647, 5605,
 2499, 3634, 8060, 3637,
 3488, 5295, 6812, 5531,
 4523, 3802
 SEI 6736, 5605, 8568, 8644,
 6896
 Sei-Sinudyne 8568, 6736, 8644, 6896,
 5874, 4648
 Seitech 7855
 Seleco 2438, 8377, 5605, 2620,
 3444, 3488, 6092, 6812,
 4530
 Semua 4523
 Sencora 7647, 3637
 Sentra 6482, 4016, 7647
 Serino 2696, 7014, 4469, 3193
 Sharp 3193, 7138, 6812, 4638,
 6127, 8568, 6538, 4174,
 7409, 5319, 4523, 3802
 Shintom 5874
 Shintoshi 8644, 6896
 Shivaki 8644, 6896, 5119, 5090,
 5393
 Show 5553, 7647, 3637
 Siarem 5605, 8568
 Siemens 3518, 6640, 6538, 5265,
 7839, 5186, 8644, 6896,
 3350
 Siemes 4523, 4648
 Siera 8644, 6896, 8299
 Sierra 4648
 Siesta 7287

Sigmax 5510
 Signature 5874
 Silma 4648
 Silva 8644, 6896, 4469, 3350,
 3451, 3637
 Silva Schneider 5952
 Silver 6812, 8644, 7014, 3350,
 6896, 6381, 5605, 3802
 SilverCrest 3840, 8644, 6896
 Singer 7647, 3011, 8644, 6896,
 5531, 3444, 3270, 5605,
 3637, 4648
 Sinotec 2335
 Sinudyne 5605, 3350, 8568, 6736,
 8644, 6896, 7733,
 Sky 8644, 5896, 3118, 5393,
 6896, 4262
 Skymaster 4819
 Skysonic 3036
 Sliding 4677, 3118
 SLX 5355
 Smaragd 6230
 Snyder 4648
 Soemtron 4677, 3191
 Solavox 3350, 5605, 4783, 8644,
 6896
 Sonawa 4016
 Soniko 8644, 6896
 Soniq 2519
 Sonitron 7910, 7287, 6559
 Sonneclair 8644, 6896
 Sonoko 8644, 6896, 7647, 3488,
 3637, 5896, 4648,
 Sonolor 7910, 5605, 6736, 4783,
 3350, 5896

Sontec 8644, 6896, 7287, 7647, 4648
 Sony 6736, 2762, 7507, 6219, 3193, 4849, 4752, 5874, 3078, 6812, 8644, 6896, 3802
 Sound & Vision 4016, 5090, 8644, 6896
 Soundesign 4523, 3802, 5510, 5874, 5393
 Soundmaster 3637
 Soundwave 8644, 6896, 5553, 6381
 Soyea 2335
 Specrician 4523, 4648
 Spectra 7647
 Ssangyong 7647
 Staksonic 7647
 Standard 8644, 6896, 3840, 4016, 7647, 5090, 3637,
 Starlite 7647, 5605, 8644, 6896, 3488, 6764, 3637,
 Starlux 3637
 Stenway 5896, 4016
 Stern 5605, 2438, 3488, 2620, 3444
 Stevision 7066, 5952
 Strato 8644, 6896, 3488, 7647
 Strong 5319, 7660, 3840, 8644, 6896
 Sunic Line 8644, 6896
 Sunkai 7384, 7014, 4016, 2696, 8644, 6896, 6230, 4677
 Sunstar 4530, 8644, 6896, 7647, 3488, 3637
 Sunwatt 7014

Sunwood 8644, 6896, 7647, 3637, 4648
 Superla 8568, 4469
 Supersonic 7910, 6896, 2924, 3488, 8484, 7014
 Supertec 3637, 4648
 Supertech 7647, 8644, 6896, 4469, 4016, 3637
 Supra 5393, 5090, 7647, 3637
 Supremacy 4523, 3802
 Supreme 5874
 Susumu 3270, 4016, 4422
 Sutron 7647, 3637
 Svasa 8484
 Swissline 5531
 Swisstec 4262, 3118
 SYC Line 3637
 Sydney 4469
 Sylvania 4648
 Symphonic 4523, 3802, 5874
 Sysline 8644, 6896
 Sytong 4469

T

T+A 6975
 Tandberg 2410, 2620, 7430, 8377, 3350, 5605
 Tandy 4016, 5531, 3193, 5605
 Tashiko 6812, 4849, 4469, 5605, 2438, 3802
 Tatung 5952, 8644, 6896, 8568, 7507, 7733, 8016, 5905, 4156, 4648
 TCM 8060, 3730, 7361

Teac 2924, 3835, 8644, 4917,
 5393, 7647, 6764, 5896,
 3840, 6896, 5716, 5355,
 5553, 4849, 8060, 7660,
 7014, 8435, 3488, 2499,
 5991
 Teak 3637
 TEC 7647, 5531, 3270, 8644,
 6896, 3350, 5605, 3637,
 3637
 Techica 4016
 Tech Line 8644, 6896, 5355, 4917,
 5319
 Techlux 4485
 Technica 7066
 Technics 4526, 4648
 Techniland 4648
 TechniSat 8644, 6896, 5605, 4201
 Technisson 8060, 3730
 Technosonic 8644, 6896
 Techwood 5319, 5510, 5874
 Tecnimagen 6896
 Tecnison 3637
 Tedalex 5553, 6305, 3011, 7647,
 8435, 7910, 2924, 8299,
 5397, 8644, 6896, 3637
 Tehnol 3637
 Teiron 7647
 Teknant 3637, 4648
 Teknika 4523, 5510
 Tekon 5510, 3637
 Teleavia 7430, 4422, 6982
 Telecor 8644, 6896, 5605, 4016,
 3158

Telefac 3637
 Telefunken 4884, 3847, 4752, 8299,
 4262, 4422, 6634, 3270,
 7430, 2924, 6982, 5716,
 5301, 8644, 6896, 2590,
 2104, 8033, 2707, 3491,
 8060, 5952, 6092, 7837
 Telefusion 8644, 6896
 Telegazi 8644, 5605, 4016, 3488,
 6896
 Telemeister 8644, 6896
 Teleopta 3637
 Telesonic 8644, 6896
 Telestar 7647, 8644, 6896, 6764,
 3637
 Teletech 8644, 6896, 5355, 7647,
 5531, 3840, 3637,
 Teleton 5605, 6812, 2438
 Televideon 5605, 4469
 Teleview 8644, 6896
 Tempest 7647, 8644, 6896, 3488,
 3637
 Tennessee 8644, 6896
 Tensai 4016, 8644, 6896, 7647,
 4819, 5090, 4530, 2796,
 5531, 6381, 5605, 3840,
 3637, 4648
 Tenson 3637, 7647
 Tesla 8644, 4648
 Tesla Orava 4648
 Tevion 7350, 4706, 5905, 3191,
 3451, 5355, 6286, 8060,
 8644, 5952, 6896, 7361,
 3840, 4596, 3730,
 Textet 5090, 7647, 4469, 4016

Thomas 4523, 5510, 3637, 5874, 4648
 Thomson 4884, 3847, 6982, 4422, 7430, 3270, 8644, 6896, 4469
 Thorn 5620, 6127, 7430, 5301, 8644, 6896, 7507, 3270, 3952, 6982, 3350, 6736, 3835, 6812, 5090, 6482, 4752, 6634, 4874, 6640, 4265, 3802
 Thorn-Ferguson 5620, 7430, 6127, 3350, 3270, 4874, 5301, 6482
 Tiny 3453, 7789, 5393, 5510
 Tobishi 4016
 Tobo 3637
 Tokai 8644, 6896, 5355, 5605, 5090, 7647, 3840, 4648
 Tokaido 3840
 Tokyo 4469, 6482, 5510
 Tomashi 5896, 4016
 Tongtel 7046, 8299
 Topline 3840, 5355
 Toshiba 4679, 4081, 6482, 3730, 7733, 7647, 2924, 8644, 6812, 4265, 8060, 7430, 3251, 5319, 4925, 5952, 4940, 5265, 3518, 2517, 5447, 4526, 8561, 3802, 5510
 Tosonic 4523, 5510
 Totevision 4523
 Toyoda 7647, 4530, 3488
 Trakton 7647, 3488
 TRANS-continentals 5355, 3840, 8644, 6896, 2590, 4677

Transonic 8644, 6896, 7014, 8299, 3835, 3488, 2924, 5716, 5553, 7647
 Transtec 4469
 TRC 3637
 Trevi 3637
 Triad 8644, 6896, 4016, 4648
 Trident 8568
 Trilux 4648
 Tristar 3488, 4016, 6127
 Triumph 8568, 6092, 6896, 8644
 Trivision 3637
 Tsoschi 5896
 TVTEXT95 6896

U

Uher 8644, 6896, 5090, 5553, 2590, 7287, 8020, 4648
 Ultravox 5090, 5531, 4469, 5605, 8644, 6896
 UMA 4648
 Unic Line 8644, 6896, 4659, 7014
 Unimor 4648
 United 8060, 8644, 6381, 6896, 7733, 3840, 8299, 7066
 Universal 8644, 6896
 Universum 6092, 4819, 5265, 4659, 2620, 4752, 7839, 5186, 6640, 3350, 5531, 6753, 6736, 5355, 7430, 8377, 8020, 7287, 6538, 5553, 8394, 7647, 6634, 3634, 7507, 8644, 3835, 6812, 3840, 4917, 4849, 5319, 4265, 5605, 3488, 6896, 7660, 2517, 3637, 4648

Univox 8644, 6896, 5605
Uranya 3637
Utax 5605

V

V7 Videoseven 5991, 5393, 3118, 4698,
7855
Vanguard 3637
Veco 3637
Vestel 8644, 5605, 6896, 5355,
3840, 5319, 4648,
Vexa 7647, 8644, 6896, 3637,
4648
Victor 4638
Video System 4648
Videologic 4016, 4469
Videologique 4469, 4016
Videosat 5531
VideoSystem 8644, 6896
Videotechnic 4469, 5090
Videoton 5605
Vidion 3637
Vidtech 6812, 5393
ViewSonic 5991
Visiola 4469
Vision 8644, 3488, 6896, 3637,
4648
Vistar 3350
Vocson 4648
Vortec 8644, 6896, 4648
Voxson 8644, 6896, 2438, 5553,
5605, 5393

W

Waltham 5553, 4422, 8644, 6896,
5355, 7430, 3840, 5605,
5119
Wards 4648
Watson 3840, 4596, 8644, 6896,
5605, 7647, 5355, 4016,
4698, 7839, 3637, 4648,
7350, 3158, 7733, 4917
Watt Radio 5605, 4469
Wega 8644, 6896, 6812, 3802
Wegavox 7647, 8644, 6896, 3637,
4648
Welltech 8060
Weltblick 8644, 6896, 4648
Weston 8644, 6896
Wharfedale 8644, 6641, 7350, 2707,
6896, 5952
White Westinghouse 4648, 4469, 8644,
6896, 2499
Windsor 5355, 3840
Windstar 5896
Windy Sam 6896
Winston 3637, 4648
Wintel 8060
Winternitz 3637
Word-of-Vision 3118, 3094, 4677, 3730,
3191, 2108, 7855,
Worldview 7014, 3637, 4648

X

Xenius 5295
XLogic 2924, 7314
Xoro 3453, 7855

Xrypton 8644, 6896

X-View 4156

Y

Yamaha 4526, 8374

Yamishi 5896, 7014, 4016, 8644,
6896

Yokan 8644, 6896

Yoko 8644, 6896, 4016, 3488,
7647, 7287, 6559, 4469,
5531, 3637, 4648

York 4648

Yorx 4016

Z

Zanussi 2438

Zenith 2499, 5874, 4648

Zenor 6559

ZX 7733

Appendix B

Legal Notices

B.1 Copyright

The intellectual property found herein belongs to the manufacturer of this product. No part of this document may be distributed or reproduced in any form, or by any means, without prior written permission from the manufacturer.

B.2 Warranty

The manufacturer warrants that, with normal use and maintenance, the product will be free of faults and defects in design and material during the warranty period.

B.3 Trademarks



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

B.4 Correct Disposal of This Product



This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

This product is under continuous development. Due to changes or improvements, some descriptions and illustrations in this guide may differ slightly from the actual product.

2014-06